

PRONAR Sp. z o.o.

MANUFACTURER



17-210 NAREW, ul. Mickiewicza 101A; Region of Podlasie

tel./fax: 0(85) 6816329; 0(85) 6816429; 0(85) 6816381;
0(85) 8733530; 0(85) 8733531;
fax: 0(85) 6816383;

www.pronar.pl

SINGLE-AXLE AGRICULTURAL TRAILER THREE-SIDE DUMPER

T654

T654/1

OPERATION & MAINTENANCE MANUAL

Identification of the machine

Symbol /Type:

KTM Symbol: 1026-636-847-405 for T654

KTM Symbol: 1026-636-847-418 for T654/1

Serial:

The serial is stamped on the type plate and on the front of the trailer's frame. The type plate is riveted to the load-carrying body.

In the course of purchase check conformity of the serial stamped on the trailer with the serial given in the warranty card, in purchase documents and in the operation manual.

Hydraulic system is filled with HL32 hydraulic oil

Quality Inspection Sign.....

The manual and the spare parts catalogue are valid together with the annex No. from the

The manufacturer reserves the right to introduce design modifications for the purpose of simplified maintenance and improved operation quality.

Remarks and notices about design and operation of the trailer should be submitted to the manufacturer. This information allows us to evaluate objectively manufactured machines and will be used as hints for further modernisation.

Information about major design alterations will be supplied to users in the form of enclosed information leaflets (annexes).

CAUTION!

The operation & maintenance manual is the substantial equipment of the trailer.

The user should read carefully the manual before operation and observe all recommendations given in the manual. This will ensure safe maintenance and failure-free operation of the machine.

The machine has been designed in accordance with generally recognised standards, documents and currently binding legal regulations.

The trailer has the CERTIFICATE NR entitling to mark the product with the safety mark valid from..... to released by Product Certification Office, IBMER Warsaw.

CONTENTS

1	INTRODUCTION	5
1.1	GENERAL INFORMATION	5
1.2	APPLICATION OF THE TRAILER	5
2	OPERATIONAL SAFETY.....	6
2.1	PRINCIPLES OF USE OF PUBLIC ROADS	8
3	ADDITIONAL INFORMATION	10
3.1	TRAILER EQUIPMENT	10
3.2	WARRANTY CONDITIONS.....	10
3.3	TRANSPORTATIONON	11
4	OPERATIONAL INFORMATION	12
4.1	TECHNICAL DATA	12
4.2	DESIGN & OPERATION PRINCIPLE	12
4.2.1	Undercarriage.....	12
4.2.2	Load crate	14
4.2.3	Hydraulic tilting system.....	14
4.2.4	Braking system.....	15
4.2.5	Wiring, lighting, signalling.....	16
4.3	PRINCIPLES OF TRAILER USE.....	18
4.3.1	Coupling with tractor.....	18
4.3.2	Preparation for work.....	19
4.3.3	Loading of the load crate.....	19
4.3.4	Transportation	20
4.3.5	Trailer unloading.....	20
4.3.6	Uncoupling the tractor	22
4.3.7	Failures and defects.....	22
5	MAINTENANCE MANUAL.....	23
5.1	ADJUSTMENT OF WHEEL BEARINGS.....	23
5.2	ADJUSTMENT OF BRAKES	23
5.3	MAINTENANCE OF PNEUMATIC SYSTEM.....	25
5.4	MAINTENANCE OF HYDRAULIC SYSTEM.....	25
5.5	LUBRICATION	26
5.6	STORAGE & PRESERVATION	28

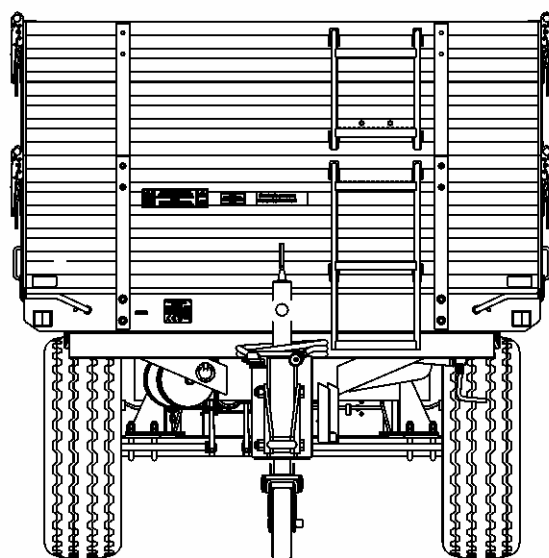
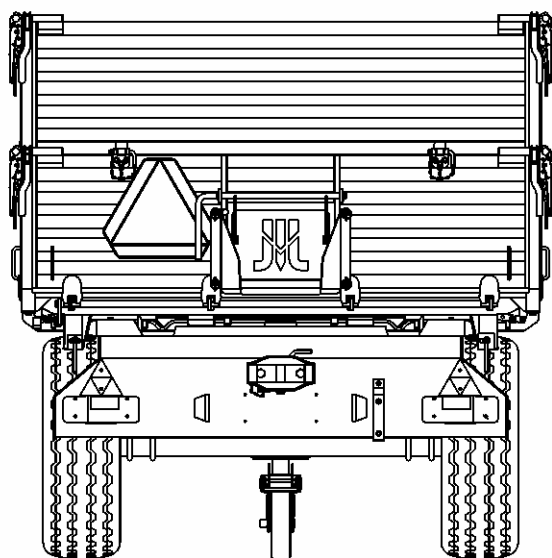
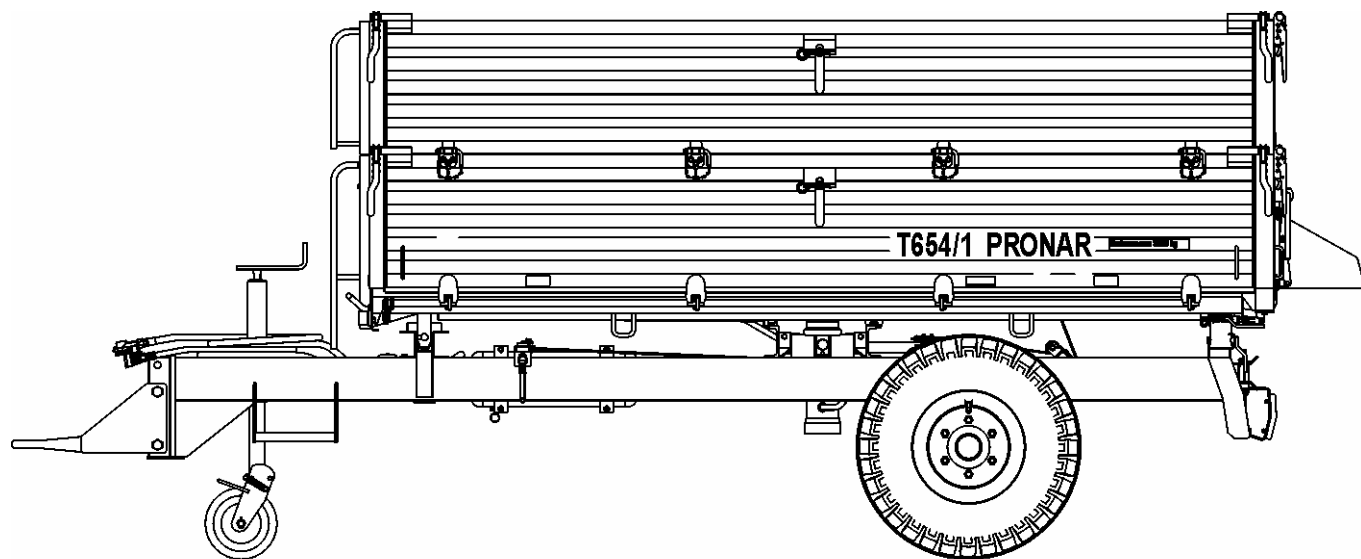


Fig. 1 Trailer T654

1 INTRODUCTION

1.1 GENERAL INFORMATION

The manual describes basic rules of safe operation & maintenance of the agricultural trailer. If information contained within the manual will be not comprehensible for the user please do not hesitate to contact your dealer or directly the manufacturer.

Especially important are informations and recommendation marked in the text by bold characters or preceded by the word "CAUTION".

Information, descriptions of danger and precautions as well as commands and orders concerning safe operations are marked with following sign:



and mentioned in the chapter „Safe operation “.

1.2 APPLICATION OF THE TRAILER

The trailer is designed for transportation of agricultural produce as well as loose and volume materials within farm limits and on public roads.

Brake, lighting and signalling systems fulfill all requirements of traffic regulations.

The trailer is adapted for coupling with agricultural tractors fitted with external hydraulic system and a hook for single-axle trailers.



CAUTION!

The trailer must not be used contrary to its proper application and especially:

- **for transporting of persons & animals,**
- **for transporting of loose, unprotected toxic materials if there is the possibility of environment contamination,**
- **for transporting of machinery & devices, which location of gravity centre may influence negatively on trailer's stability,**
- **for transporting of loads, which may cause unequal load or overload of axles,**
- **for transporting of nonfastened loads, which may change their location on the trailer's platform during drive.**

2 OPERATIONAL SAFETY



- The user should read carefully the manual before operation and observe all recommendations given in the manual during operation.
- If information contained within the manual will be not comprehensible for the user please do not hesitate to contact your dealer, who also provides repair & service or directly the manufacturer.
- Careless and improper operation & maintenance of the trailer as well as lack of observation of recommendations given in present manual may endanger human health and life.
- Lack of observation of safe use rules may endanger health of operators and third persons.
- There is the risk of residual danger, thus application of safe operation rules should be the basic principle of trailer's use.
- Persons unauthorised for driving agricultural tractors including children and drunk persons have no right to use the trailer.
- It is prohibited to use the trailer contrary to its purposes. User, who utilise the trailer in other than prescribed manner, takes all responsibility for all consequences resulting from trailer's use.
- Any unauthorised modification absolves the PRONAR Narew from responsibility for resulting damage or health detriment.
- Prior to each trailer's use check its technical condition, especially coupling system, drive system, brakes and signalling lights.
- Check trailer's hydraulic system frequently; any oil leakage is inadmissible.
- Take special care while coupling trailer with tractor.
- For coupling with tractor use only hooks for single-axle trailers. Check safety device.
- In the course of coupling no-one is allowed to stand between trailer and tractor.
- Climbing on the trailer is allowed only if the trailer is completely stopped and tractor's engine off; the trailer should be also braked with its hand brake.
- Disconnection of the trailer while the load crate is lifted with the telescope cylinder is prohibited. Take special care by disconnecting the trailer.
- Disconnected trailer should be braked. If the trailer stands on a slope or an elevation it should be protected additionally with wedges or other blunt-edged objects placed under wheels.
- The load should be placed uniformly on the load crate surface.

- Admissible load must not be exceeded.
- Driving with lifted load crate and transporting of people & animals is prohibited.
- No-one is allowed to stand in the vicinity of lifted load crate and unloaded material.
- Keep safe distance from electric lines while lifting the load crate.
- If any operation failure or damage occurs, stop operation of the trailer and repair the damage.
- Maintenance & repair of the trailer with loaded and/or lifted load crate without proper support of the crate is prohibited.
- During trailer's operation use protection gloves and proper tools.
- All maintenance & repair works should be performed with observation of safety regulations. In the case of wound wash and disinfect wounded place immediately. In the case of serious injuries consult a physician.
- The trailer is marked with information / signalling stickers as described in the table 1 below. The user should take care of legibility and cleanliness of inscriptions & warnings for all time of trailer's operation. In the case of damage or destruction replace missing stickers with new ones – available at your dealer or manufacturer.

Table 1. Information & warning stickers




Safety sign or text	Explanation	Location
	Read operation manual	Front wall
	Prior to maintenance & repair stop the engine and remove the ignition key	Front wall
	Prior to maintenance & repair secure the load crate	Right & left wall

Table 1. Information & warning stickers, continued

Safety sign or text		Explanation	Location
„Maintenance & repair of the trailer with loaded and/or lifted load crate without proper support of the crate is prohibited”			Front wall
„Couple with single-axle trailers hook only”			Front wall
„Maximum load 2500 kg”			Right & left wall (T654)
„Maximum load 3500 kg”			Right & left wall (T654/1)
„550 kPa”	Tyre pressure 10.0/75-15.3 14PR		Above wheels, right & left wall (T654)
„475 kPa”	Tyre pressure 10.0/75-15.3 14PR		Above wheels, right & left wall (T654/1)

2.1 PRINCIPLES OF USE OF PUBLIC ROADS

- While driving public roads observe traffic regulations.
- Trailer’s overload may cause its damage and endanger traffic safety.
- Do not exceed the maximum speed of 30 kph. Adjust the speed to traffic conditions.
- The trailer can work on slopes up to 8°. Lift the load crate on level ground only.
- It is prohibited to leave unsecured trailer. Always activate the parking brake.
- While driving public roads the trailer should be equipped with certified or approved warning reflecting triangle.

Rear wall should be equipped with a triangular plate for slowly moving vehicles (if the trailer is the last vehicle in a set (Fig. 2)).

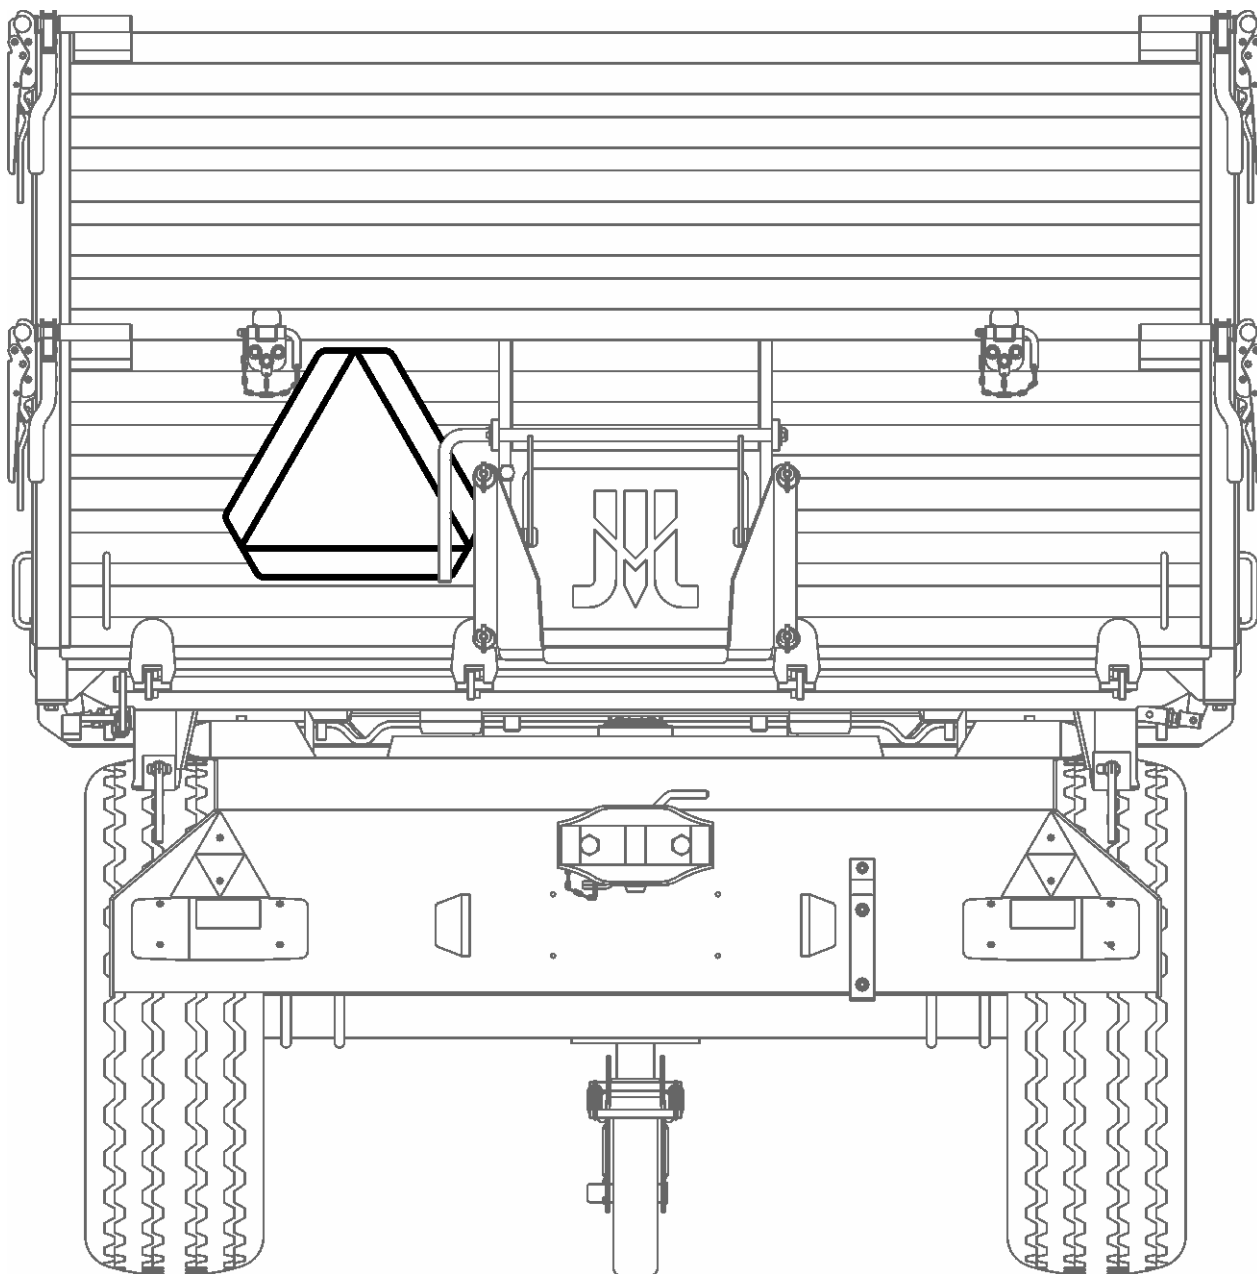


Fig. 2 Location of a triangular plate for slowly moving vehicles.

It is prohibited to leave unsecured trailer. Always activate the parking brake.

3 ADDITIONAL INFORMATION

3.1 TRAILER EQUIPMENT

Trailer equipment consists of:

- | | | |
|--|---|---|
| • operation & maintenance manual + spare parts catalogue | - | 1 |
| • warranty card | - | 1 |
| • connection cable | - | 1 |

For user's order the trailer may be equipped additionally with:

- warning reflecting triangle
- triangular plate for slowly moving vehicles



CAUTION!

Assembly & disassembly of the superstructure should be performed with help of proper platform, ladder or ramp. Two operators secured from falling down should perform this operation with special care.

3.2 WARRANTY CONDITIONS

"PRONAR" Sp. z o.o. guarantees efficient operation of the trailer if utilised according to technical & operation conditions described in the manual.

Failures detected within warranty period will be removed by the Warranty Service within no longer than 14 working days from the date of delivery to a repair station or within any other agreed period.

Normally wearing parts i.e. tyres, brake linings as well as mechanical damage, damage resulted from improper use, adjustment or maintenance are not subject of warranty.

Detailed warranty conditions are mentioned in the warranty card supplied together with the newly bought trailer.



CAUTION!

Demand your dealer to fill the warranty card and complaint coupons exactly and completely. Lack of e.g. sale date or dealer's stamp may render your possible complaint void.

3.3 TRANSPORTATION

The trailer is delivered for sale fully assembled and requires no package. Packed are only: the manual, the connection cable and – if ordered – the warning triangle.

The trailer is supplied to the user with a truck or the user can take by himself with his own tractor.



CAUTION!

If the user takes the trailer by himself he should read present manual and observe all recommendations given in the manual. In the case of transportation with a truck the trailer is fastened on the load crate according to generally recognised safety rules. The truck driver should take special precautions while transporting the trailer, because the gravity centre of the loaded truck is shifted upwards.

4 OPERATIONAL INFORMATION

4.1 TECHNICAL DATA

Table 2. Basic technical data

No.	Data	Unit	T654	T654/1
1	Overall length	mm	4825	4825
2	Overall width	mm	2045	2045
3	Overall height	mm	1320	1490(1990)*
4	Wheel base	mm	1500	1500
5	Load crate intern. dimensions:			
	- length	mm	3310	3310
	- width (front / rear)	mm	1860	1860
	- height	mm	400	500(1000)*
6	Load volume	m ³	2,5	6,2
7	Load surface	m ²	6,2	6,2
8	Load surface height above ground	mm	885	960
9	Weight	kg	1280	1320(1490)*
10	Admissible total weight	kg	3780	4990
11	Admissible load	kg	2500	3670(3500)*
12	Load crate tilt angle			
	- sideways	(°)	50	50
	- backwards	(°)	50	50
13	Wheel ring dia.		9.00x15.3	9.00x15.3
14	Tyre dimensions & PR number		10.0/75-15.3 14 PR	11.5/80-15.3 14 PR
15	Tyre pressure	kPa	550	475
16	Rated voltage	V	12	12
17	Admissible speed	km/h	30	30
18	Hydraulic oil capacity	l	8	8

Table 3. Tyres – technical data

Tyre dimensions (PR number)	Load index & speed symbol	Tread	Ring	Rolling radius [mm]	Load [kg] at speed [kph]			Used pressure [kPa]	Notes
					30	40	other		
10.0/75 15.3 14PR	130 A8	TL	9.00x15.3	343	2033	1900		550	BF Goodrich
11.5/80 – 15.3 1 PR	139 A8	TL	9.00x15.3	373		2430		475	BF Goodrich

4.2 DESIGN & OPERATION PRINCIPLE

4.2.1 Undercarriage

Trailer's undercarriage consists of parts shown on the Fig. 3. The lower frame (3) is a welded structure made of steel profiles. Main carrying elements are two stringers connected each to other with cross-bars.

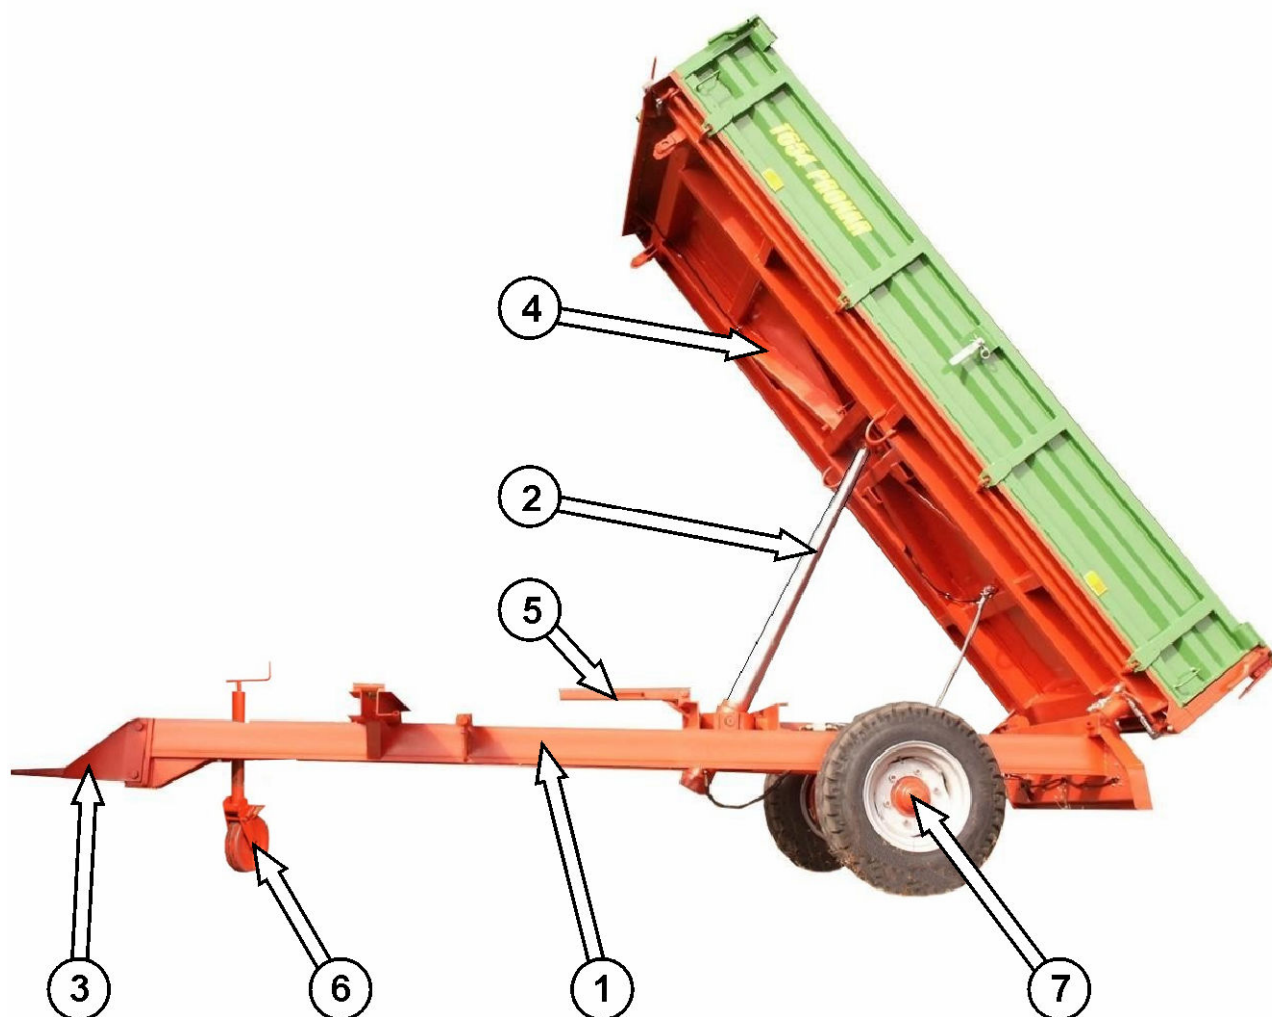


Fig. 3 Undercarriage & upper frame

1 – lower frame, 2 – hydraulic cylinder, 3 – hitch bar, 4 – upper frame, 5 – load crate support, 6 – supporting wheel, 7 - axle

The rear part of the frame is fitted with bolts for mounting the upper frame, the middle part – with a seat for a hydraulic cylinder (2). The rear part of the frame is fitted also with mountings for an axle (7) and for rear lighting elements. The axle (7) is made of a square rod with pivots on either end; on pivots are mounted conical bearings and on bearings – wheel hubs. The wheels are of single type, fitted with shoe brakes actuated with brake cams.

4.2.2 Load crate

The load crate consists of: upper frame welded together with floor and walls A, B and C.

The upper frame is mounted to the lower frame with bolts, which simultaneously are the axis for tilting rearwards.

The wall locks (5) and the chute flap (4) are protected from spontaneous, undesirable opening.

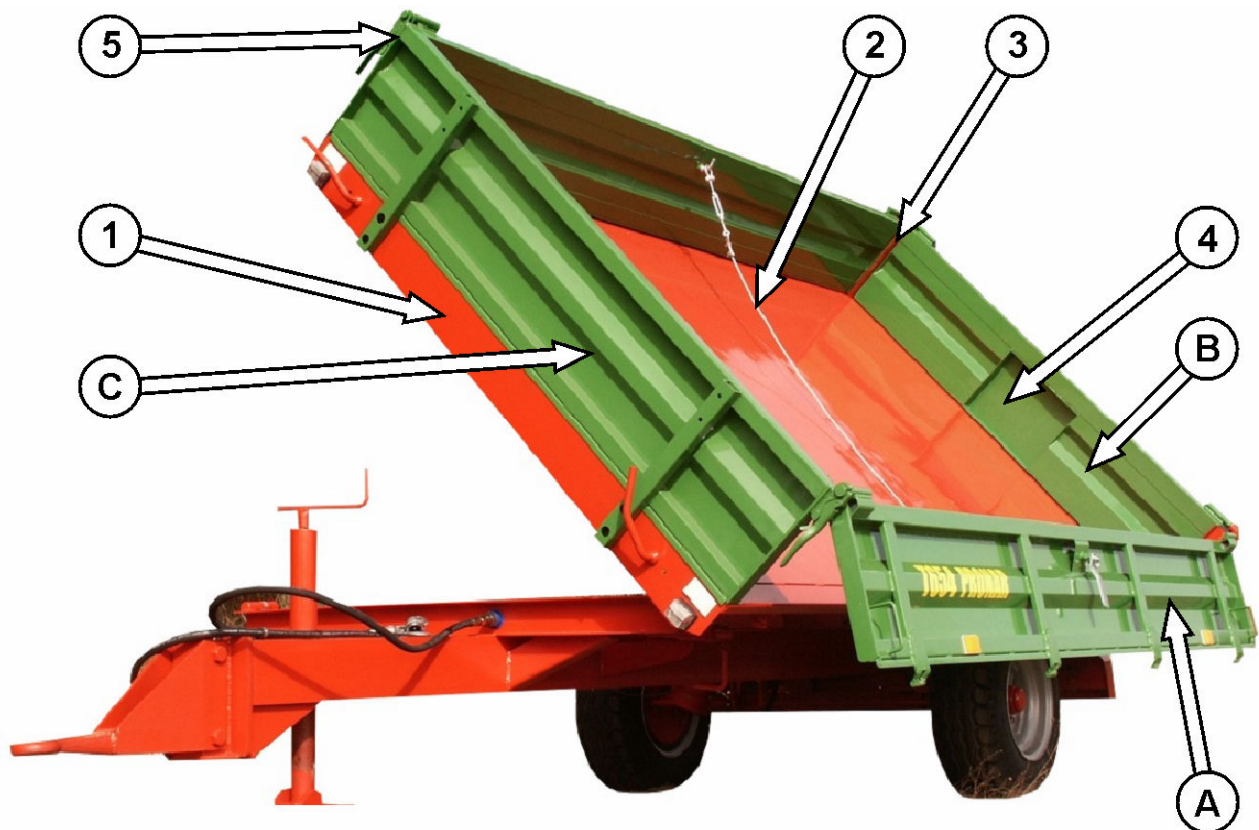


Fig. 4 Load crate

A – side walls, B – rear wall, C – front wall, 1 – upper frame, 2 – connecting cable, 3 – rear stake, 4 – chute flap, 5 – wall locks

4.2.3 Hydraulic tilting system

Hydraulic tilting system is designed for automated unloading of the trailer through tilting the load crate backwards or sideways. The hydraulic system is supplied with oil from tractor's hydraulic system. Tilting of the load crate is controlled with a distributor of tractor's external hydraulic system.



CAUTION!

The cut-off valve (2) reduces load crate tilting angle. The length of the rope is adjusted by the manufacturer and must not be readjusted by the user.

The trailer is fitted with a braking system, which consists of:

- pneumatically controlled operational brake
- manually operated (crank-operated) parking brake

The operational brake (pneumatic) is actuated from driver's seat with a brake pedal. In the case of disconnection from tractor's pneumatic system the brake is actuated automatically.

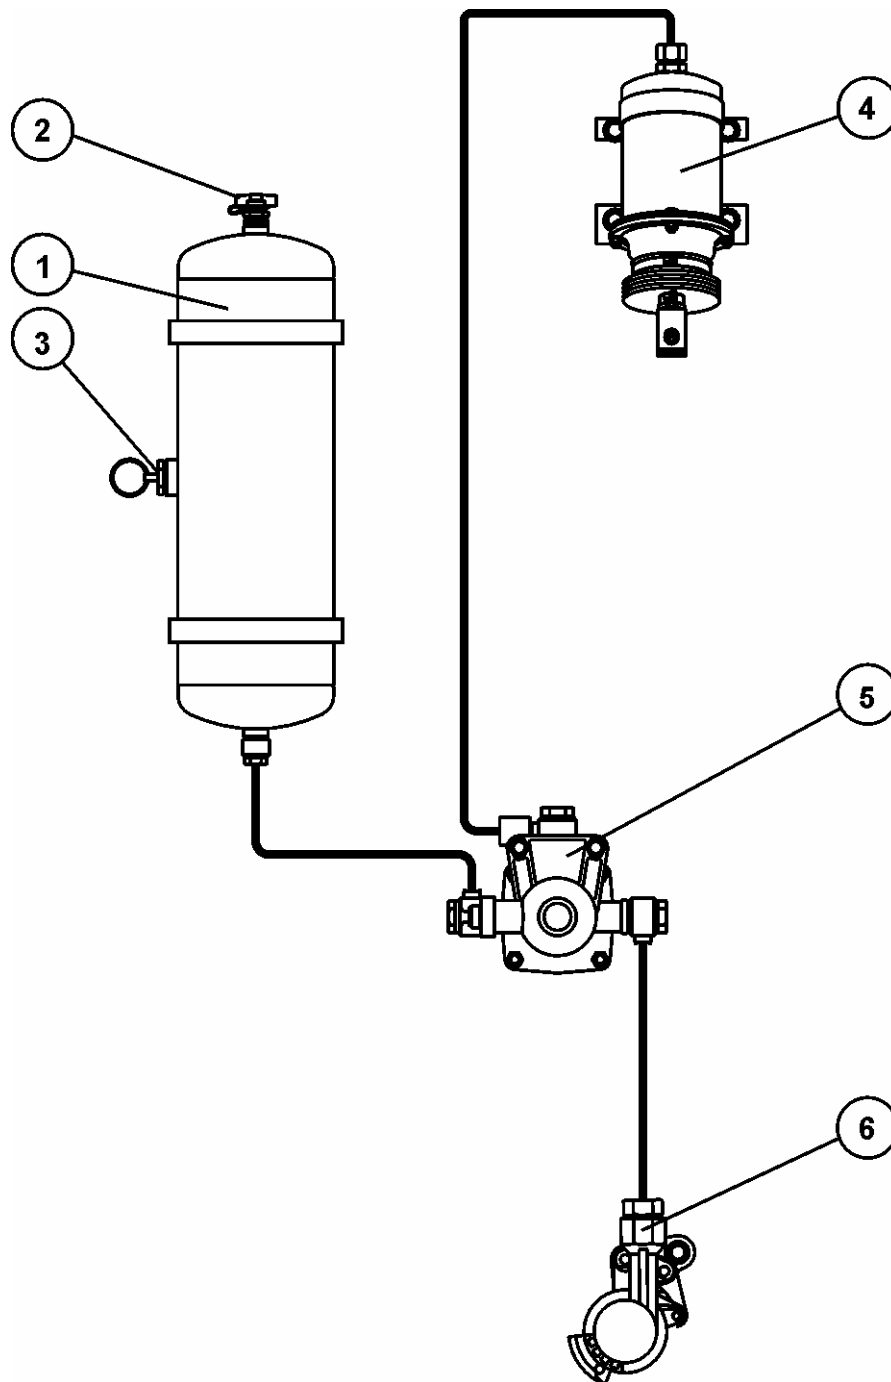


Fig. 6 Pneumatic braking system

1 - air reservoir, 2 - inspection connector, 3 - drain valve, 4 - pneumatic cylinder, 5 - control valve, 6 - conduit connector

4.2.5 Wiring, lighting, signalling

The wiring system is adapted for power supply with 12 V AC. Trailer and tractor electrical systems should be connected together with suitable connection conduit.

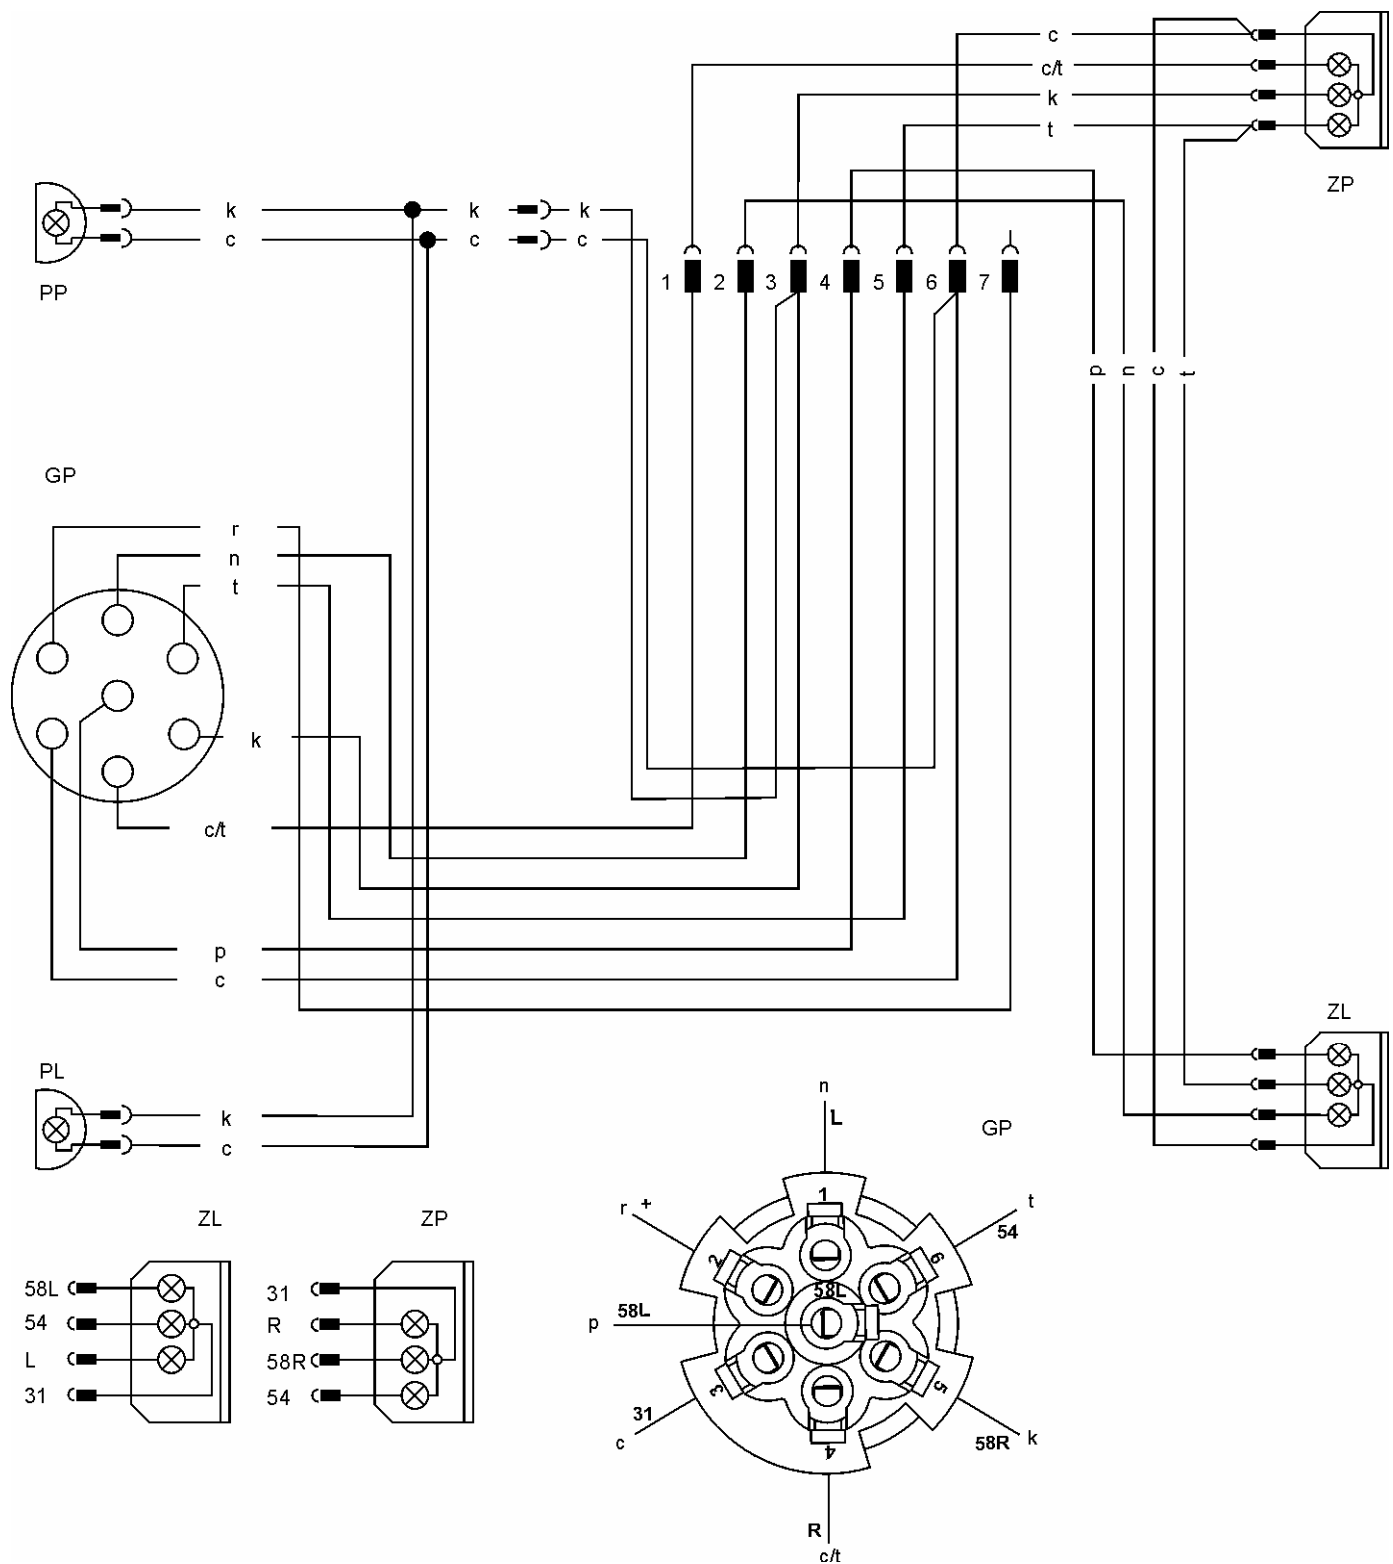


Fig. 7 Trailer wiring system

PP (PL) – right (left) front position light, GP – connection socket, ZP (ZL) - right (left) rear position light

Conduit colours

p – orange, *c* – black, *k* – red, *r* – rose, *n* – blue, *c/t* – black-green, *t* - green,
 31 – frame, R (L) – right (left) blinker, 58R (58L) – right (left) position lamp, 54 - „STOP”, „+” – power supply +12V AC

4.3 PRINCIPLES OF TRAILER USE

4.3.1 Coupling with tractor

Prior to coupling with tractor check if the trailer is braked with the parking brake. To couple trailer with tractor it is necessary to perform following operations:

- Position the hitch rod eye on suitable level. Precise adjustment of the rod can be achieved with use of the support wheel screw (fig. 8).
- Draw back the tractor, couple hitch rod eye **with a hook for single-axle trailers** on the tractor and check its fastening.
- With the screw raise the support wheel upwards. By pressing the pedal (2) loose the wheel and manually move it to the transport position as shown on the fig. 8b.
- Connect electrical, hydraulic and brake conduits to the tractor.
- Unlock the trailer parking brake.

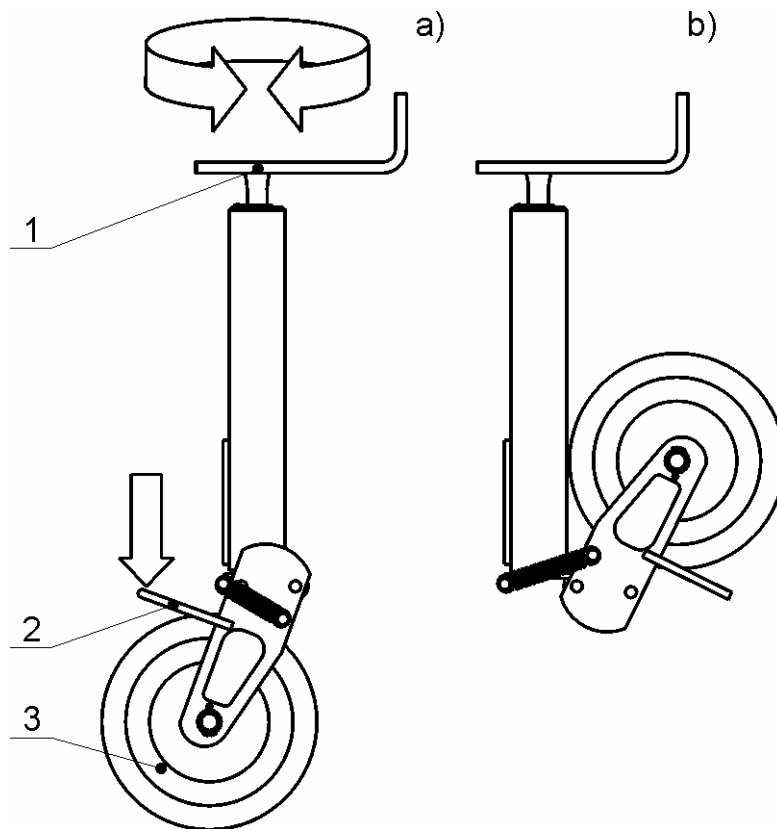


Fig. 8 Trailer support

1 – screw, 2 – pedal, 3 – support wheel



CAUTION!

In the course of coupling no-one except of operator is allowed to stand between trailer and tractor.

4.3.2 Preparation for work

During preparation for work it is necessary to check following items:

- **condition of tyres and tyre pressure**
- **fastening of nuts fixing wheels and hitch rod**
- **condition of other screw connections**
- **function of lighting & signalling systems**
- **function of braking system**
- **condition and function of wall locks and hinges**
- **function of hydraulic tilting system**

4.3.3 Loading of the load crate

It is allowed to load the crate only if it is coupled with a tractor and stands on the level ground. Loading should be arranged uniformly on the entire load crate floor, if possible.

It is recommended to use a crane, a loader or a conveyor for loading. Prior to loading check if wall locks & hinges and the chute flap are closed.

In the case of objects, which put pressure in a few points only use thick boards as separators. Table 4 contains admissible loading heights of various materials. **The table shows clearly that – in many cases – it is impossible to use the entire loading volume without exceeding the admissible load.** It is important not to overload the trailer during loading.

Lightweight materials of great volume may be loaded above wall height but the load should be properly secured from falling down and polluting the road.

Table 4. Loading height

Type of material	Loading height [m]	
	T654	T654/1
wet gravel, wet soil, clinker, stone	0,20	0,30
cement, dry gravel, soil, brick	0,30	0,40
manure, full brick, mineral fertiliser	0,40	0,65
rye, potatoes, maize, rape, wheat	0,40	0,75
barley, oats, peat, coke	0,40	1,00



CAUTION!

- **It is prohibited to exceed the admissible trailer load. Overload may endanger traffic safety and damage the trailer.**
- **Prior to drive with the trailer check if**
 - **bolts connecting load crate with lower frame are protected against spontaneous falling out**
 - **wall hinge bolts are secured from falling out.**

4.3.4 Transportation

- While driving public roads observe traffic regulations.
- Trailer's overload may cause its damage and endanger traffic safety.
- Do not exceed the maximum admissible speed. Adjust the speed to traffic conditions.
- The trailer can work on slopes up to 8°.
- While driving public roads the trailer should be equipped with certified or approved warning reflecting triangle.
- Rear wall should be equipped with a triangular plate for slowly moving vehicles (if the trailer is the last vehicle in a set).

4.3.5 Trailer unloading

Unloading is performed through tilting the load crate backwards or sideways. Automated unloading should be executed as follows:

- Place the trailer on flat ground, brake the tractor and the trailer with the parking brake. During unloading the tractor should be positioned as to drive forward
- Open lower locks or relevant wall locks (according to unloading direction)
- Tilt the load crate with help of the hydraulic cylinder.



CAUTION!

- It is allowed to tilt the load crate only when the trailer stands on hard, flat ground.
- Use only original bolts with grip. Use of other bolts may result in destruction of the trailer
- Take special precautions while opening wall locks due to load pressure on walls.
- Take special precautions while closing walls and chute to avoid crushing fingers.
- Unloading of loose materials loaded higher than 1 m may be realised only by tilting the load crate backwards.
- During unloading no one is allowed to stand in the vicinity of tilted load crate.
- It is allowed to tilt the load crate only if the trailer is coupled with a tractor.
- It is prohibited to tilt the load crate during violent wind gusts.
- Do not move and/or drive with the load crate in upper position.

The rear wall is fitted with a chute, which opening can be adjusted resulting in slots of various heights. This enables adjustment of output of unloaded loose materials e.g. mineral fertilisers or cereal. To open the chute, first loose the nut of the securing clamp. While using the chute do not open rear wall locks.

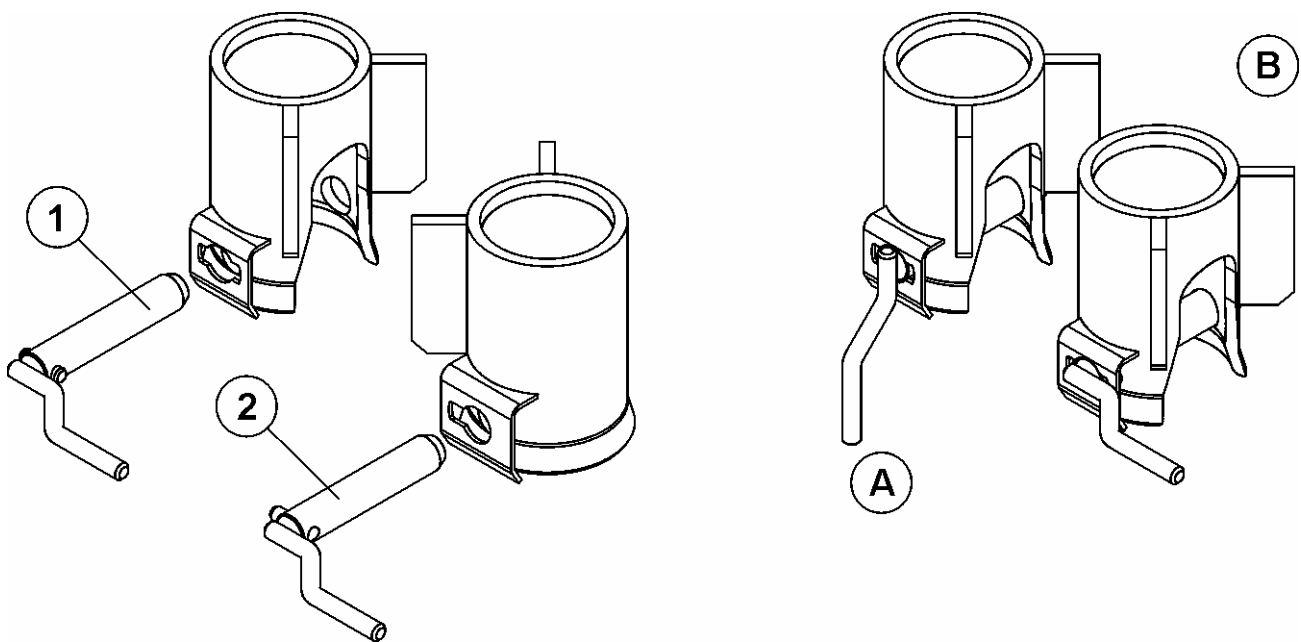


Fig. 9 Tilt bolts

1 – Tilt bolt I, 2 – Tilt bolts II

A – tilt bolt locked, B – tilt bolt unlocked

After unloading:

- Lower the load crate
- Clean wall edges and floor from residues or impurities. Close walls. Close locks to make spontaneous opening impossible

When unloading on sloped ground it's admissible to tilt the load crate on this side, which is higher.

4.3.6 Uncoupling the tractor

To uncouple the trailer perform following actions:

- Stop the tractor and stop the trailer with the parking brake.
- Disconnect electric, hydraulic and brake conduits; protect their ends from dirt.
- Place the support wheel in its lower position and with help of the screw lower it until touches the ground.
- Discouple the hitch rod and drive off the tractor.

4.3.7 Failures and defects

Frequently appearing failures & defects and troubleshooting are given in the chapter "MAINTENANCE MANUAL".

5 MAINTENANCE MANUAL



CAUTION!

- If any operation failure or damage occurs, stop operation of the trailer and repair the damage/ remove the failure.
- Maintenance & repair of the trailer with loaded and/or lifted load crate without proper support of the crate is prohibited.
- All maintenance & repair works should be performed with observation of safety regulations. In the case of wound wash and disinfect wounded place immediately. In the case of serious injuries consult a physician.
- If it is necessary to maintain the trailer with lifted load crate (e.g. replacement of the telescope cylinder) commission a specialised workshop to make repair.

5.1 ADJUSTMENT OF WHEEL BEARINGS

After first 500 km and after every next 1500-2000 km check and – if necessary – adjust play of wheel bearings. For this purpose it is necessary to perform following actions:

- Couple the trailer with a tractor, brake the tractor, place locking wedges under trailer wheels and raise each wheel with suitable hoist. Place the hoist between bail screws, which fasten the suspension spring to the axle. Check the play.
- If the play is excessive, dismount the hub cover and remove the cotter pin of the crown nut.
- While turning the wheel screw the crown nut tight until the wheel stops.
- Unscrew the nut by 1/3 of turn until the next cotter pin groove will be aligned with the opening in the pivot.
- Secure the nut with the cotter pin and mount the hub cover.

The wheel should turn smooth, without stops and perceptible resistance, which do not result from rubbing between brake shoes and the drum.

5.2 ADJUSTMENT OF BRAKES

The brakes should be adjusted if:

- excessive play between shoe and drum appears due to wear of brake shoes; braking efficiency falls down
- Brakes operate uneven and not simultaneously.

If brakes are adjusted properly braking of both wheels should take place in the same moment.

Adjustment of brakes consists in adjustment of position of the brake cam arm (1) (Fig. 10) in relation to the cam shaft (2). For this purpose loose the nut (4) and change position of the arm on the multi-groove end of the shaft (2) towards proper direction i.e.:

- backward – if the brake brakes to late
- forward – if the brakes brakes to soon

Perform adjustment separately for each wheel. After proper brake adjustment cam arms should form the angle of 90° in relation to pneumatic cylinder push rod whilst the braking power is greatest. Parking brake should be adjusted if the brake cable is excessively stretched or if cable clamps are loosened. Cable lenght should be matched so that by fully loosened parking and working brakes the cable would be loose and hang down by $1 \div 2$ cm.

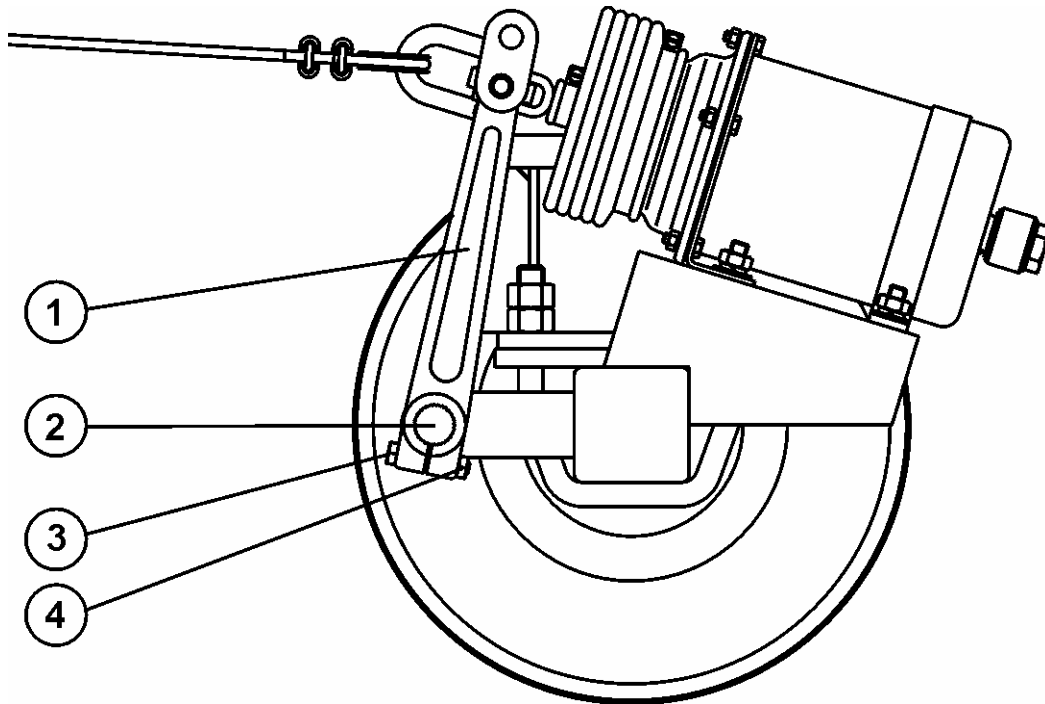


Fig. 10 Brake adjustment elements

1 - brake cam arm, 2 - brake cam shaft, 3 - screw, 4 - nut



CAUTION!

With properly adjusted brakes the braking force should be not lower than values given in the table 5.

Table 5. Braking force

Trailer type	Main brake braking force (kN)	Parking brake braking force (kN)
T654	11,4	6,8
T654/1	15,0	9,0

Difference between left and right wheel braking forces must not exceed 30% with assumption that the “100%” means the greater force.



CAUTION!

The trailer braking power is the sum of braking forces of both wheels.

5.3 MAINTENANCE OF PNEUMATIC SYSTEM

In the scope of maintenance operations it is necessary to perform inspection of pneumatic system tightness, especially at all connections. Tightness test should be executed with system pressure rated at ca. 600 kPa (6,0 kg/cm²).

If conduits, sealings or other elements of the system are damaged, air will get out in points of damage with typical hiss or – in the case of small leakages – in the form of small air bubbles. Small leakage can be detected with soap water or washing agent. Damaged sealings or conduits replace with new ones. If the reason of leakage is the damaged pneumatic cylinder – regenerate it.

Periodically remove condensed water from the air tank. For this purpose pull out the drain valve arbour located in the upper part of the tank. Compressed air will push the water out. After loosening the arbor the valve should close automatically and stop airflow from the tank.

Once a year just before the winter unscrew the drain valve and clean it from accumulated dirt.

5.4 MAINTENANCE OF HYDRAULIC SYSTEM

It is necessary to take as the principle that the oil in the trailer hydraulic system and the oil in the external tractor hydraulic system is of the same type. Application of different oil types is prohibited.

New trailers are filled with HL32 hydraulic oil. The hydraulic system of the trailer should be absolutely tight. Test of tightness consists in coupling of the trailer with a tractor, activation of the hydraulic cylinder and keeping it in its maximally pulled out position for 30 s.

If oil leaks at connections of hydraulic conduits, screw the connection tightly; if leakage persists – replace the conduit or the connector with a new one. If oil leaks between connections, replace the damaged conduit. Each mechanical damage requires replacement of damaged element.

If the body of the hydraulic cylinder is polluted with oil check the reason of leakage.

While the cylinders are entirely pulled out check all sealings. Small leakage of “sweating off” type are admissible; if drops of oil are observed – stop the operation and repair the failure.



CAUTION!

Operation of the trailer with untight tilting hydraulic system is prohibited.

It is prohibited to operate a trailer with lengthened (in relation to manufacturer's adjustment) rope controlling the cut-off valve (2) (Fig. 5)



CAUTION!

Condition of the hydraulic system should be checked all time during trailer's operation.

If the hydraulic systems is used very intensively (great number of tilts) replace hydraulic conduits every 4 years.

5.5 LUBRICATION

The trailer should be lubricated in points shown on fig. 11, and described in the table 6 „Lubrication points of the T654 trailer”.

Table 6. Lubrication points of the T654 trailer

No. at fig. 11	Lubrication point	Number of points	Grease type	Frequency & method of lubrication
1	Support screw	4	solid	every 3 – 4 months
2	Locks of load crate walls	12	oli	once a month
3	Chute guide	2	solid	every 3 - 4 months cover with very thin layer of grease
4	Seats of load crate	4	solid	every 2 months cover surfaces with fresh grease
5	Superstructure hinges	10	solid	every 1 months cover bolts with grease
6	Parking brake screw	1	solid	every 3 – 4 months
7	Upper ball articulation of the cylinder	1	solid	every 6 months
8	Bolts of lower mounting of the hydraulic cylinder	4	solid	every 6 months cover surfaces with fresh grease
9	Brake cam consoles	4	solid	every 6 months
10	Wheel bearings	4	solid	replace grease every 2 years

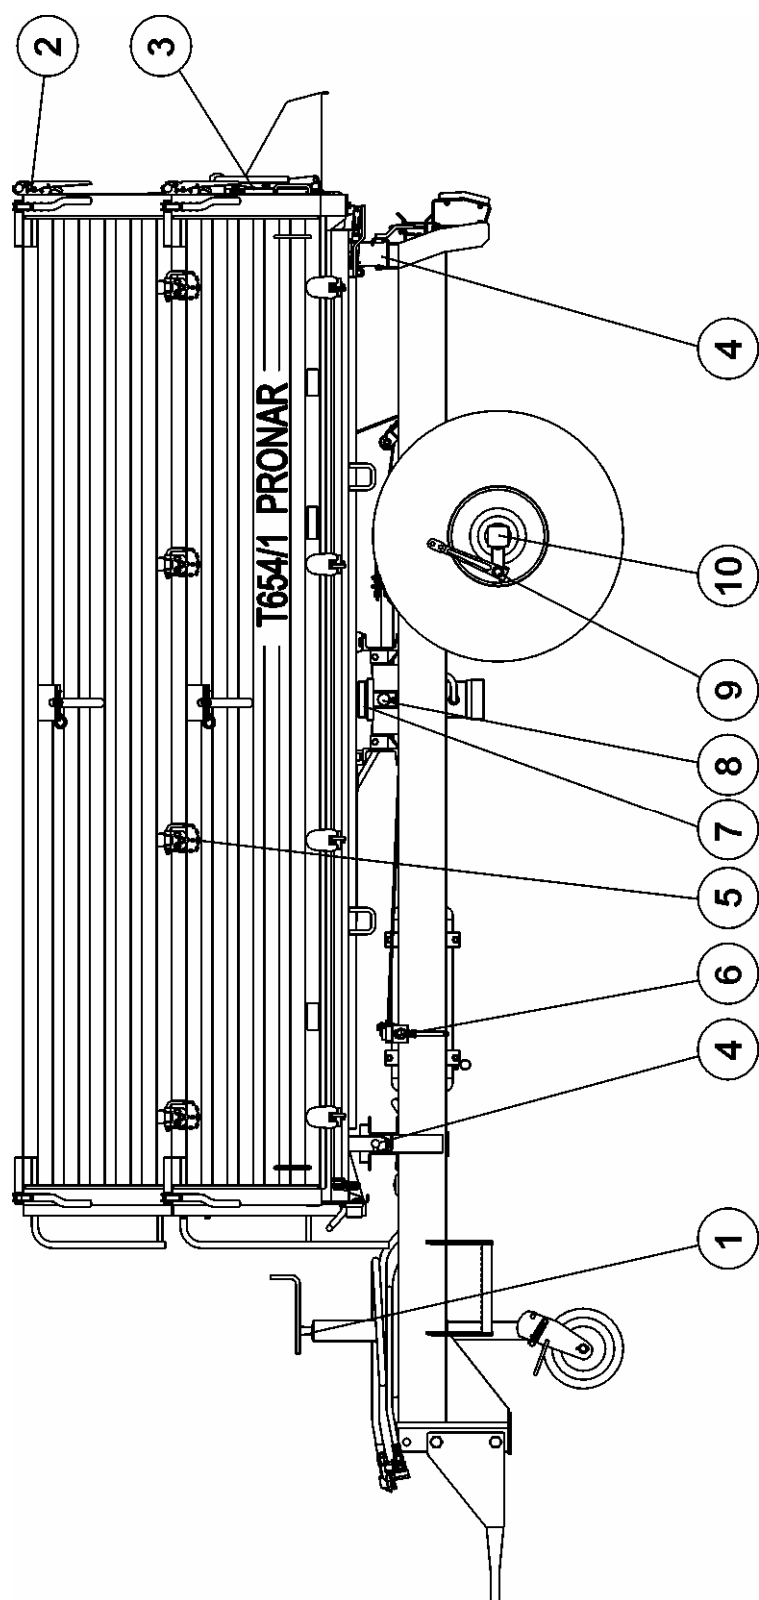


Fig. 11 Lubrication points of the trailer

5.6 STORAGE & PRESERVATION

After work clean the trailer and wash with water stream. If the varnish coat is damaged, clean such place from rust and dust, degrease, and paint of the same colour and uniform layer thickness. If damaged places will not be painted immediately, cover them with thin layer of grease or anticorrosion agent.

It is recommended to store the trailer in a closed or roofed storage. If the trailer is stored outdoor for long period protect it from atmospheric influence, especially from agents causing corrosion and ageing of tyres.

**SINGLE-AXLE AGRICULTURAL TRAILER
THREE-SIDE DUMPER**

**T654
T654/1**

SPARE PARTS CATALOGUE

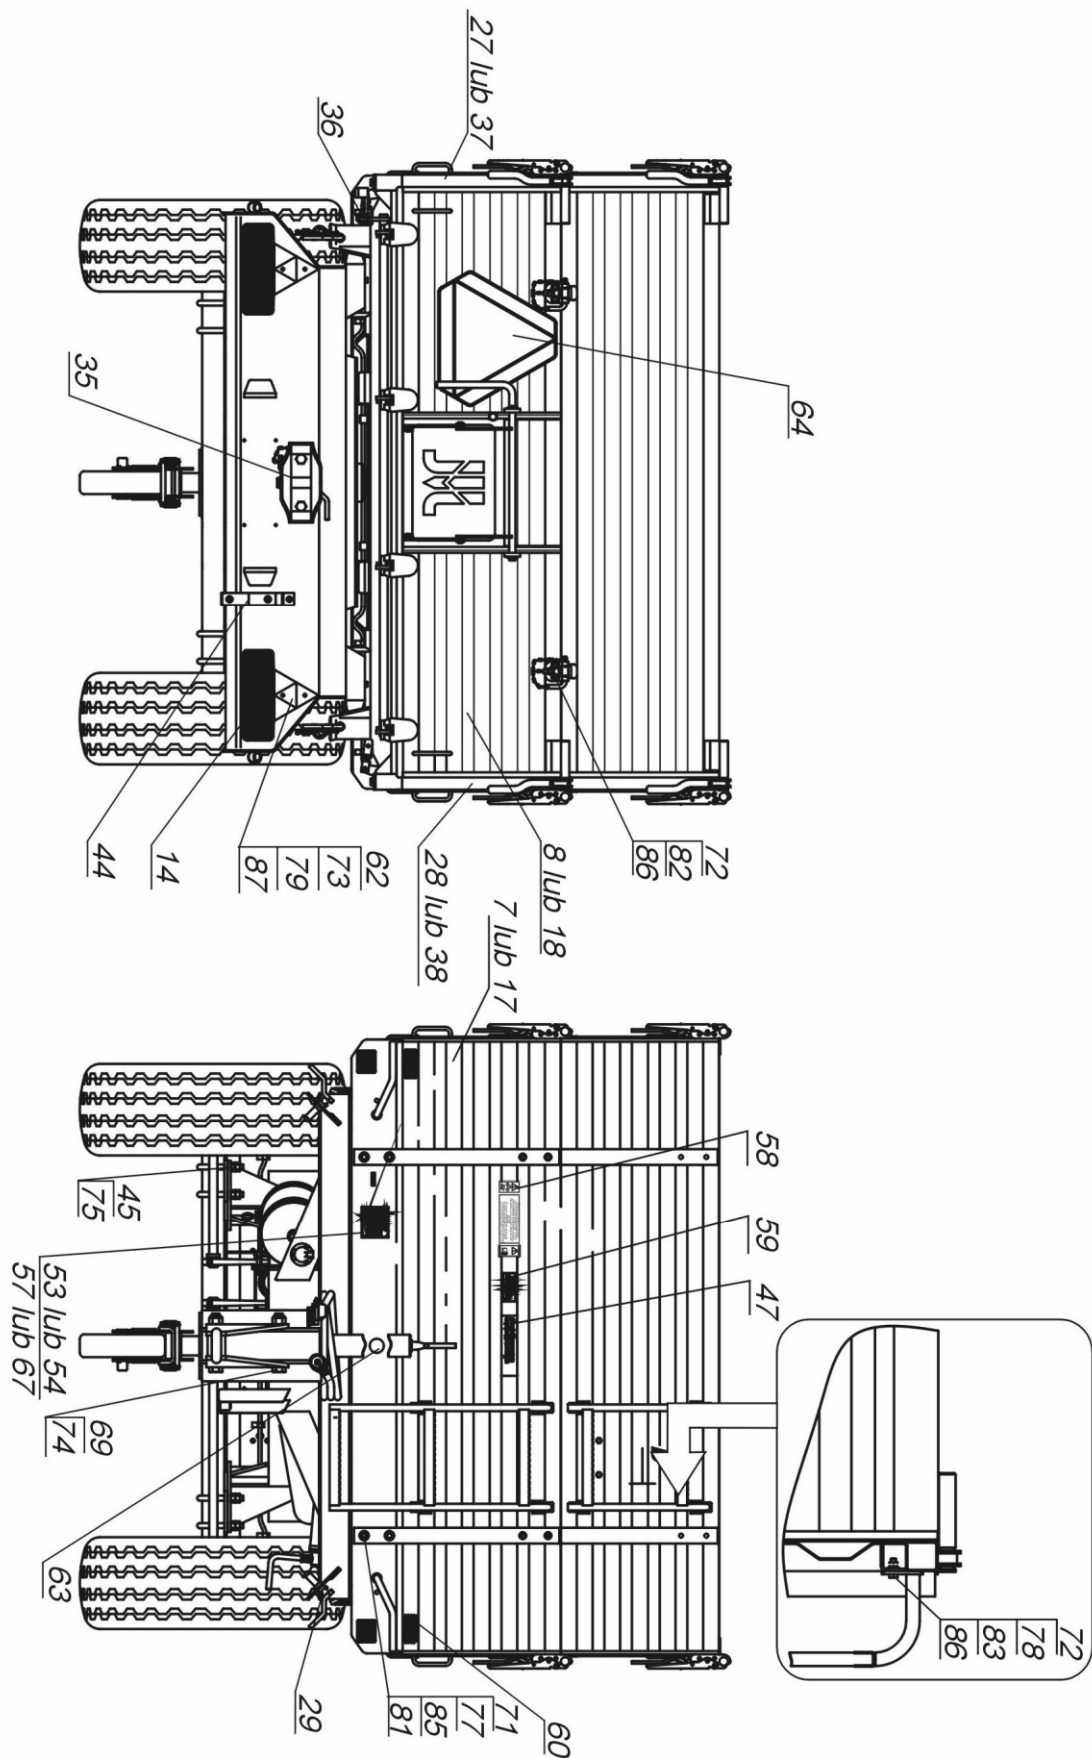


Fig. 12 Single-axle agricultural trailer T654, T654/1

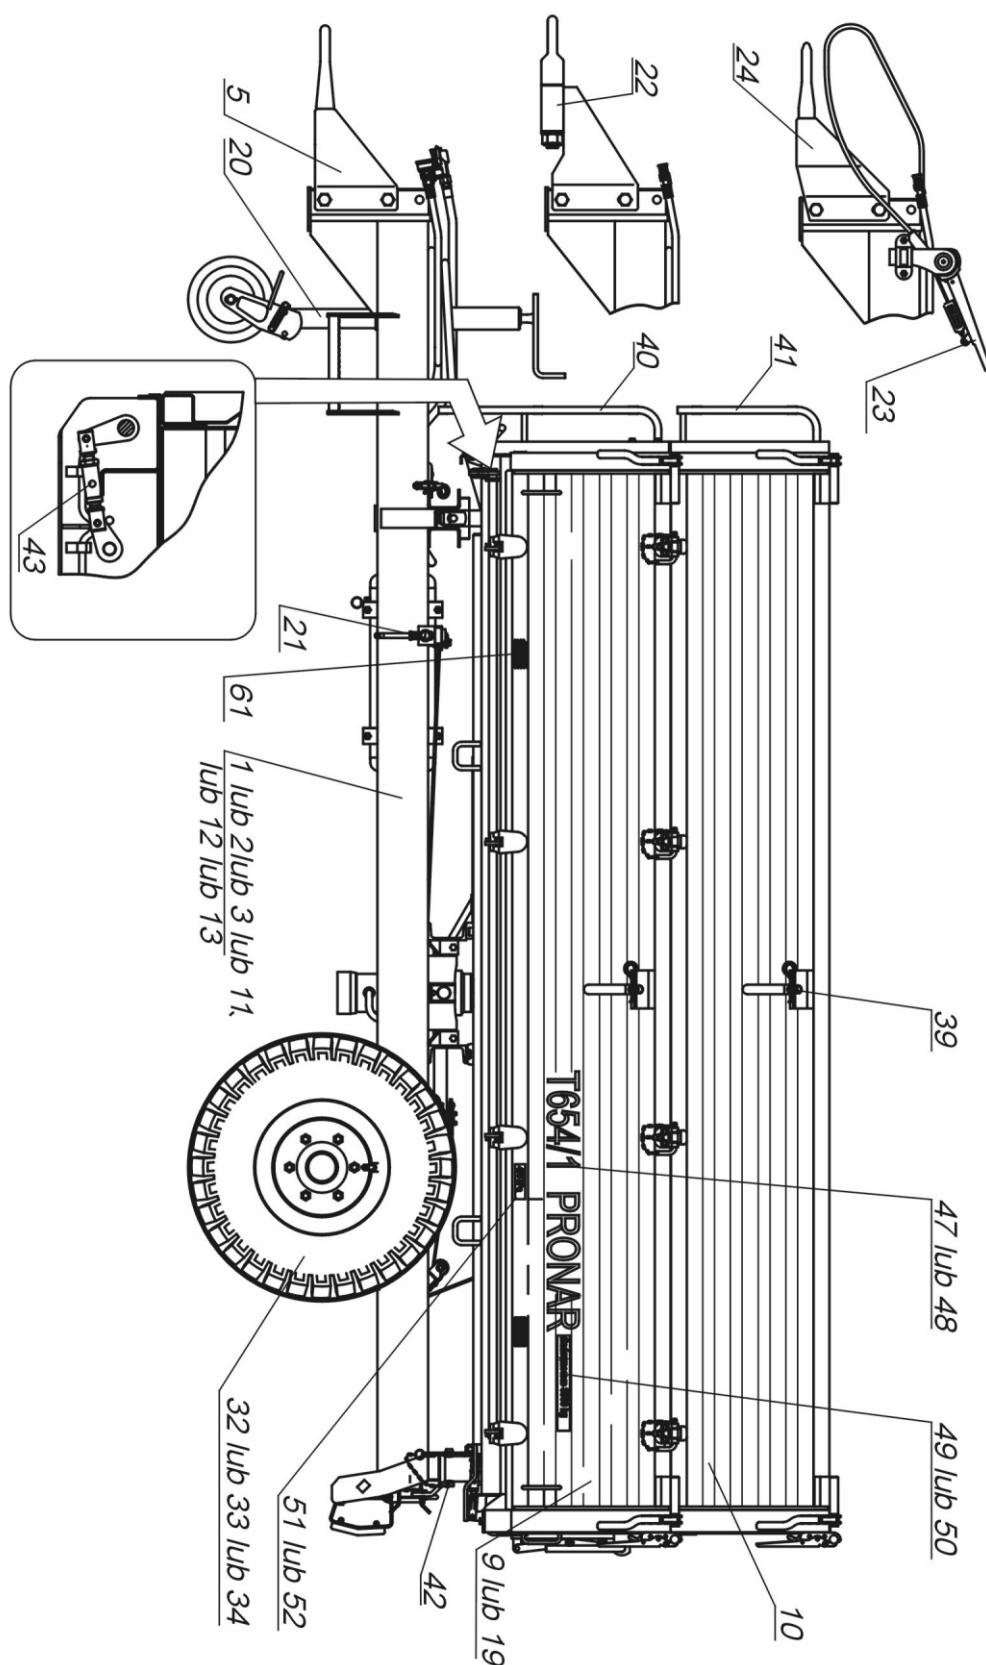


Fig. 13 Single-axle agricultural trailer T654, T654/1

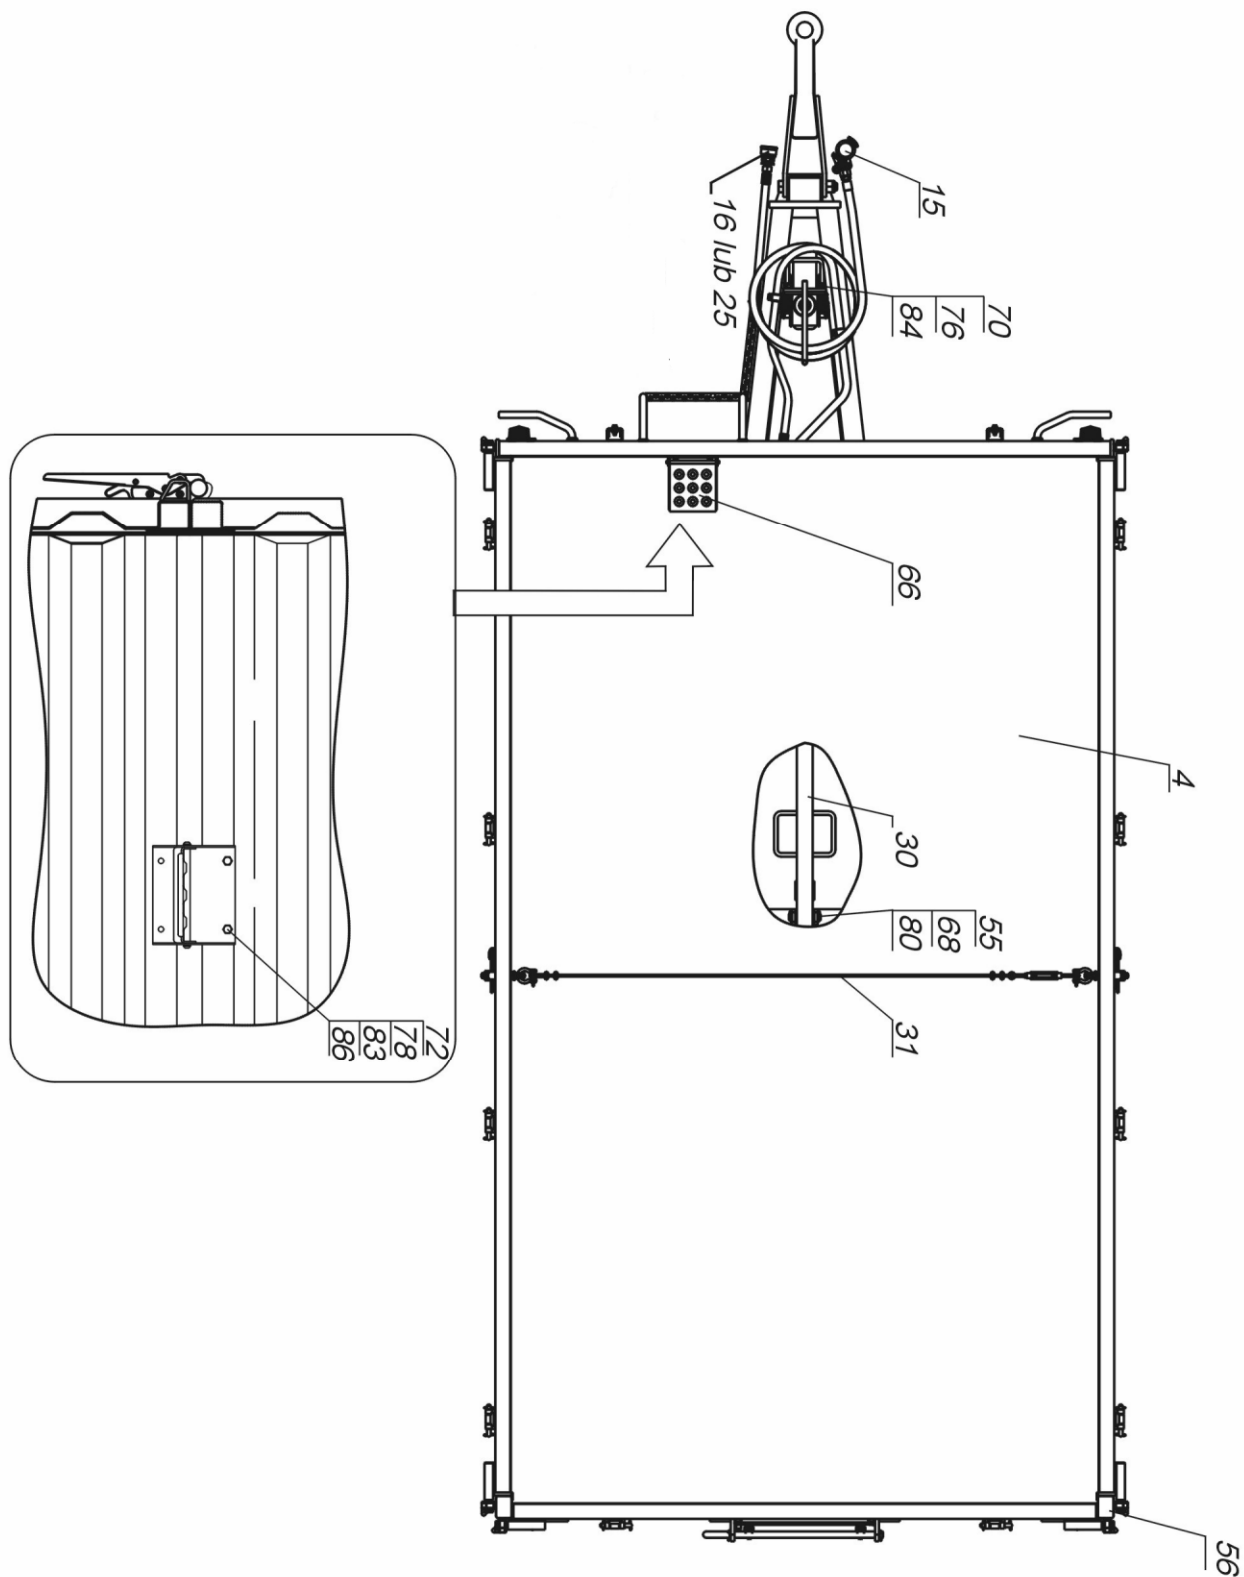


Fig. 14 Single-axle agricultural trailer T654, T654/1

No.	Description (Drawing Nos.: 12, 13, 14)	No. of drawing/standard	Qty					
			T654	T654/DK	T654/A	T654/1	T654/1/DK	T654/1A
1	Lower frame	37RPN-01.00.000	1	-	-	-	-	-
2	Lower frame	37RPN-01.00.000-DK	-	1	-	-	-	-
3	Lower frame	37RPN-01.00.000-A	-	-	1	-	-	-
4	Lower frame	37RPN-02.00.000	1	1	1	1	1	1
5	Hitch rod	37RPN-03.00.000	1	-	-	1	-	-
7	Front wall	37RPN-05.00.000	-	-	-	1	1	1
8	Rear wall, set	37RPN-06.00.000	-	-	-	1	1	1
9	Side wall	37RPN-07.00.000	-	-	-	2	2	2
10	Set of superstructures	37RPN-08.00.000	-	-	-	1	1	1
11	Lower frame (3.5 t)	37RPN-09.00.000	-	-	-	1	-	-
12	Lower frame (3.5 t)	37RPN-09.00.000-DK	-	-	-	-	1	-
13	Lower frame (3.5 t)	37RPN-09.00.000-A	-	-	-	-	-	1
14	Wiring	37RPN-10.00.000	1	1	1	1	1	1
15	Pneumatic system	37RPN-11.00.000	1	-	-	1	-	-
16	Hydraulic system	37RPN-12.00.000	1	-	-	1	-	-
17	Front wall (400)	37RPN-13.00.000	1	1	1	-	-	-
18	Rear wall, set	37RPN-14.00.000	1	1	1	-	-	-
19	Side wall (400)	37RPN-15.00.000	2	2	2	-	-	-
20	Support + wheel, set	37RPN-16.00.000	1	1	1	1	1	1
21	Parking brake	37RPN-17.00.000	1	1	-	1	1	-
22	Hitch rod	37RPN-18.00.000	-	1	-	-	1	-
23	Hand brake	37RPN-22.00.000	-	-	1	-	-	1
24	Hitch rod	37RPN-21.00.000	-	-	1	-	-	1
25	Hydraulic system (DK)	37RPN-19.00.000	-	1	1	-	1	1
27	Stake, left (400)	37RPN-00.01.000	1	1	1	-	-	-
28	Stake, right (400)	37RPN-00.02.000	1	1	1	-	-	-
29	Tilt bolt I	29RPN-00.20.000	1	1	1	1	1	1
30	Support	37RPN-00.04.000	1	1	1	1	1	1
31	Connecting cable, cpl.	37RPN-00.05.000	1	1	1	2	2	2
32	Wheel, cpl.	37RPN-00.06.000	2	2	2	-	-	-
33	Wheel, cpl.	37RPN-00.07.000	-	-	-	2	-	-
34	Wheel, cpl.	37RPN-00.08.000	-	-	-	-	2	2
35	Rear hook, set.	37RPN-00.09.000	1*	1*	1*	1*	1*	1*
36	Rear lock	29RPN-00.02.000	1	1	1	1	1	1
37	Stake, left	29RPN-00.03.000	-	-	-	1	1	1
38	Stake, right	29RPN-00.04.000	-	-	-	1	1	1
39	Line disconnection mechanism	29RPN-00.05.000	2	2	2	4	4	4
40	Lower ladder	29RPN-00.12.000	-	-	-	1	1	1
41	Upper ladder	29RPN-00.13.000	-	-	-	1	1	1
42	Tilt bolt II	29RPN-00.21.000		1	1	1	1	1
43	Pull rod, set	29RPN-00.00.300	2	2	2	2	2	2
44	Bumper	37RPN-00.00.100	1	1	1	1	1	1
45	Bail screw	37RPN-00.00.001	4	4	4	4	4	4
46	Information sticker II	37RPN-00.00.002	1	-	-	1	-	-
47	Sticker „T654”	37RPN-00.00.003	2	-	-	-	-	-
48	Sticker „T654/1”	37RPN-00.00.004	-	-	-	2	-	-

No.	Description (Drawing Nos.: 12, 13, 14)	No. of drawing/standard	Qty					
			T654	T654/DK	T654/A	T654/1	T654/1/DK	T654/1A
49	Sticker „Load 2500kg”	37RPN-00.00.005	2	-	-	-	-	-
50	Sticker „Load 3500kg”	37RPN-00.00.006	-	-	-	2	-	-
51	Sticker „550 kPa”	37RPN-00.00.007	2	-	-	-	-	-
52	Sticker „475 kPa”	37RPN-00.00.008	-	-	-	2	-	-
53	Type plate	37RPN-00.00.009	-	1	-	-	1	-
54	Type plate	37RPN-00.00.010	-	1	-	-	1	-
55	Support bolt	29RPN-00.00.009	1	1	1	1	1	1
56	Stake blind plug	29RPN-00.00.010	2	2	2	2	2	2
57	Type plate	29RPN-00.00.011	1	-	-	1	-	-
58	Information sticker I	29RPN-00.00.012	1	-	-	1	-	-
59	Information sticker III	29RPN-00.00.024	1	-	-	1	-	-
60	Reflection sticker, rectangular, white	DOB35	2	2	2	2	2	2
61	Reflection sticker, rectangular, yellow	DOB35	4	4	-	4	4	-
62	Reflecting triangle DOB31, set	DOB31	2	2	2	2	2	2
63	Stopper IKP45		1	1	1	1	1	1
64	Triangular table for slow moving vehicles		1*	-	-	1*	-	-
65	Reflecting triangle		1*	-	-	1*	-	-
66	Side step Zn.	EB 20-010	-	-	-	1	1	1
67	Rivet 3x8	PN-83/M-82971	4	4	-	4	4	-
68	Cotter pin 4x32 S-Zn	PN-76/M-82001	2	2	2	2	2	2
69	Screw M24x170-8.8-B-Fe/Zn	PN-85/M-82101	2	2	2	2	2	2
70	Screw M12x35-8.8-B-Fe/Zn	PN-85/M-82105	4	4	4	4	4	4
71	Screw M10x30-8.8-B-Fe/Zn	PN-85/M-82105	4	4	4	4	4	4
72	Screw M8x25-8.8-B-Fe/Zn	PN-85/M-82105	-	-	-	44	44	44
73	Screw M5x20-4.8-B-Fe/Zn5	PN-85/M-82215	4	4	4	4	4	4
74	Nut M24-8-B-Fe/Zn5	PN-85/M-82175	2	2	2	2	2	2
75	Nut M16-5-B-Fe/Zn5	PN-85/M-82144	16	16	16	16	16	16
76	Nut M12-5-B-Fe/Zn5	PN-86/M-82144	4	4	4	4	4	4
77	Nut M10-5-B-Fe/Zn5	PN-86/M-82144	4	4	4	4	4	4
78	Nut M8-5-B-Fe/Zn5	PN-86/M-82144	-	-	-	10	10	10
79	Nut M5-5-B-Fe/Zn5	PN-86/M-82144	4	4	4	4	4	4
80	Washer 21-Fe/Zn5	PN-78/M-82005	2	2	2	2	2	2
81	Washer 10.5-Fe/Zn5	PN-86/M-82030	4	4	4	4	4	4
82	Washer 8.5-Fe/Zn	PN-86/M-82030	-	-	-	34	34	34
83	Washer 8.4-Fe/Zn5	PN-78/M-82005	-	-	-	10	10	10
84	Washer 12.2-Fe/Zn5	PN-76/M-82008	4	4	4	4	4	4
85	Washer Z 10.2-Fe/Zn5	PN-77/M-82008	4	4	4	4	4	4
86	Washer Z 8.2-Fe/Zn5	PN-77/M-82008	-	-	-	44	44	44
87	Washer Z 5.1-Fe/Zn5	PN-77/M-82008	4	4	4	4	4	4

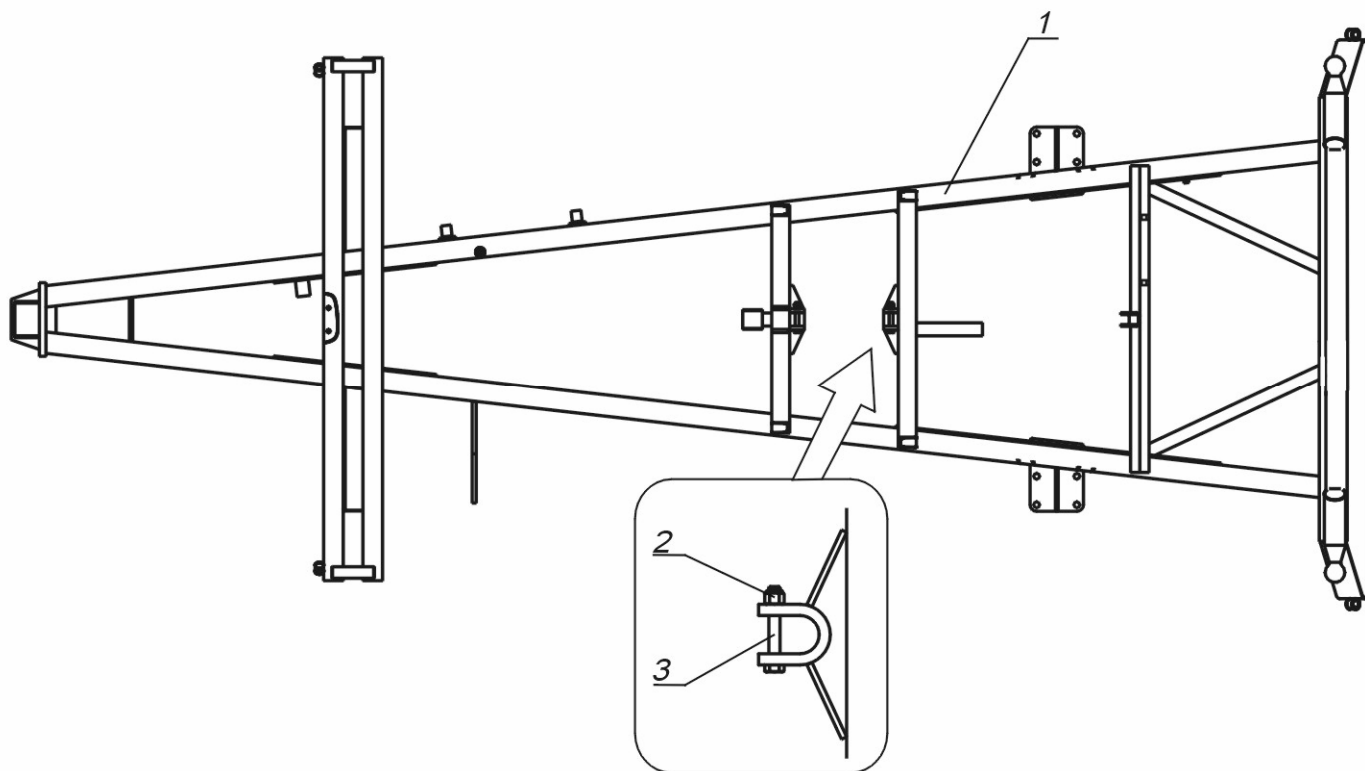


Fig. 15 Lower frame

No.	Description (Drawing No 15)	No. of drawing/standard	Qty					
			T654	T654/DK	T654/A	T654/1	T654/1/DK	T654/1A
1	Lower frame	37RPN-01.00.000	1	-	-	-	-	-
	Lower frame	37RPN-01.00.000-DK	-	1	-	-	-	-
	Lower frame	37RPN-01.00.000-A	-	-	1	-	-	-
	Lower frame (3,5t)	37RPN-09.00.000	-	-	-	1	-	-
	Lower frame (3,5t)	37RPN-09.00.000-DK	-	-	-	-	1	-
	Lower frame (3,5t)	37RPN-09.00.000-A	-	-	-	-	-	1
2	Nut M12-5-B-Fe/Zn5	PN-85/M-82175	2	2	2	2	2	2
3	Screw M12x85-5.8-B-Fe/Zn5	PN-85/M-82101	2	2	2	2	2	2

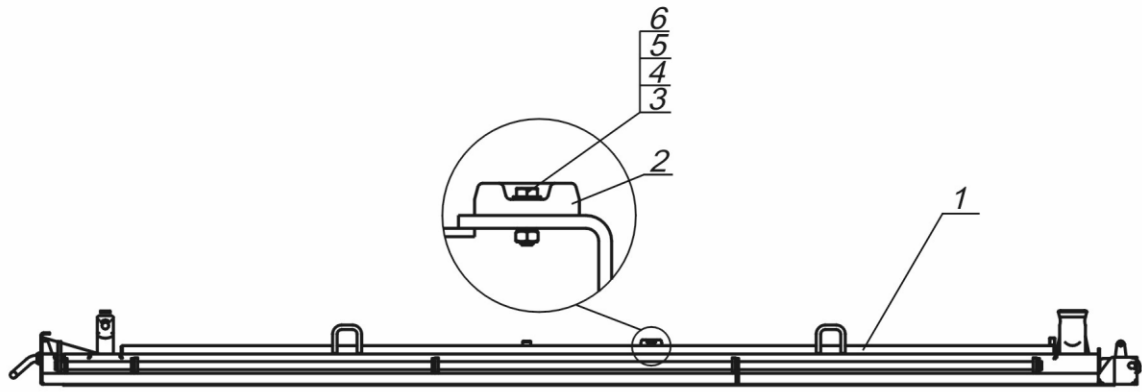


Fig. 16 Upper frame

No.	Description (Drawing No.: 16)	No. of drawing/standard	Qty					
			T654	T654/DK	T654/A	T654/1	T654/1/DK	T654/1A
1	Upper frame, set	37RPN-02.00.000	1	1	1	1	1	1
3	Washer	29RPN-00.00.002	2	2	2	2	2	2
4	Screw M8x30-5.8-B-Fe/Zn5	PN-85/M-82105	4	4	4	4	4	4
5	Nut M8-5-B-Fe/Zn5	PN-86/M-82144	4	4	4	4	4	4
7	Washer 8.4 Fe/Zn5	PN-78/M-82005	4	4	4	4	4	4
8	Spring washer 8.2 Fe/Zn5	PN-77/M-82008	4	4	4	4	4	4

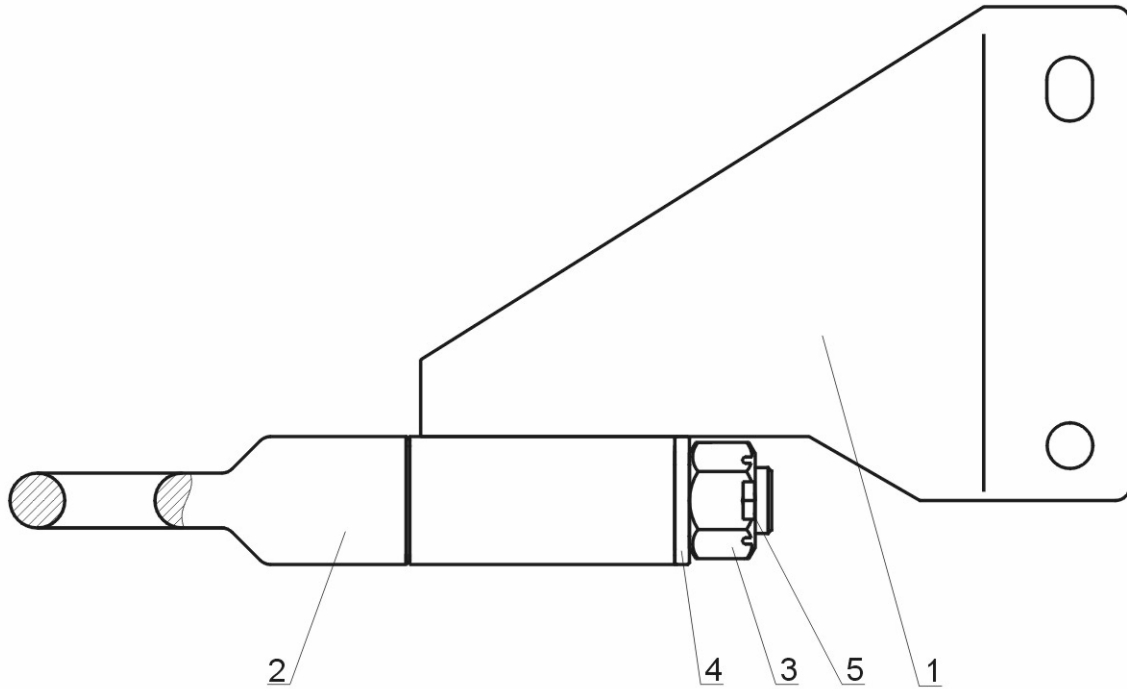


Fig. 17 Hitch rod

No.	Description (Drawing No.: 17)	No. of drawing/standard	Qty					
			T654	T654/DK	T654/A	T654/1	T654/1/DK	T654/1A
1	Hitch rod	37RPN-03.00.000	1	-	-	1	-	-
	Hitch rod	37RPN-21.00.000	-	-	1	-	-	1
	Hitch rod	37RPN-18.00.000	-	1	-	-	1	-
	Hitch rod	37RPN-18.01.000	-	1	-	-	1	-
2	Pull rod	37RPN-18.00.001	-	1	-	-	1	-
3	Crown nut ZM36x3-6-B	PN-86/M-82148	-	1	-	-	1	-
4	Washer	37RPN-18.00.002	-	1	-	-	1	-
5	Cotter pin S-Zn 6.3x71	PN-76/M-82001	-	1	-	-	1	-

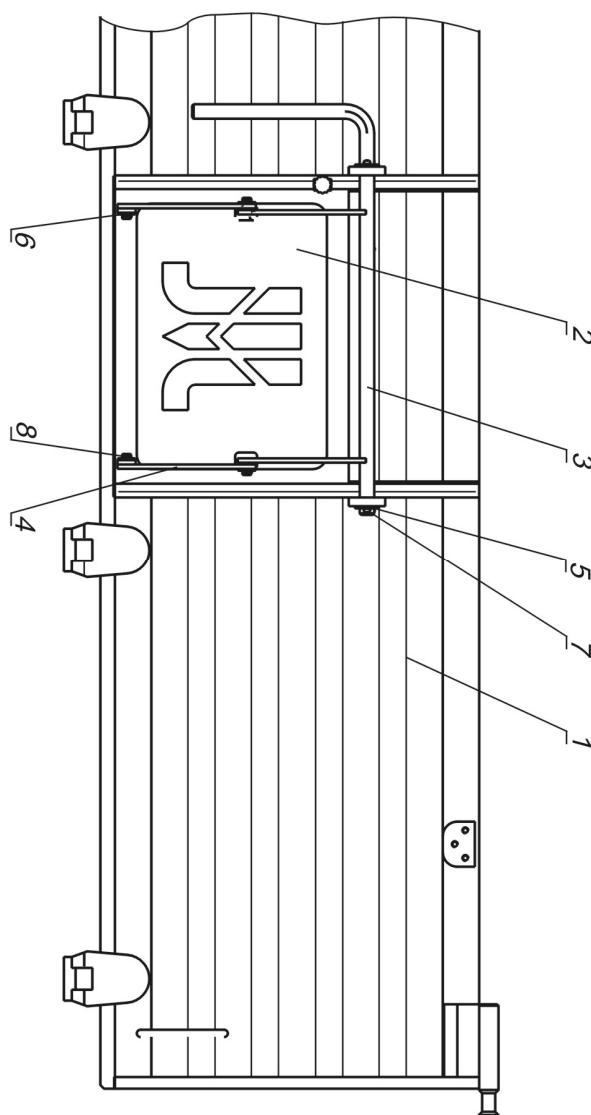


Fig. 18 Rear wall, set

No.	Description (Drawing No.: 18)	No. of drawing/standard	Qty					
			T654	T654/DK	T654/A	T654/1	T654/1/DK	T654/1A
	Rear wall, set	37RPN-14.00.000	1	1	1	1	1	1
1	Rear wall	37RPN-14.01.000	1	1	1	1	1	1
2	Gate, set	29RPN-06.02.000	1	1	1	1	1	1
3	Lever	29RPN-06.03.000	1	1	1	1	1	1
4	Pull rod	29RPN-06.04.000	2	2	2	2	2	2
5	Washer 21 Fe/Zn5	PN-78/M-82005	2	2	2	2	2	2
6	Washer 13 Fe/Zn5	PN-78/M-82005	6	6	6	6	6	6
7	Cotter pin S-Zn 5x28	PN-76/M-82001	2	2	2	2	2	2
8	Cotter pin S-Zn 3.2x16	PN-76/M-82001	4	4	4	4	4	4

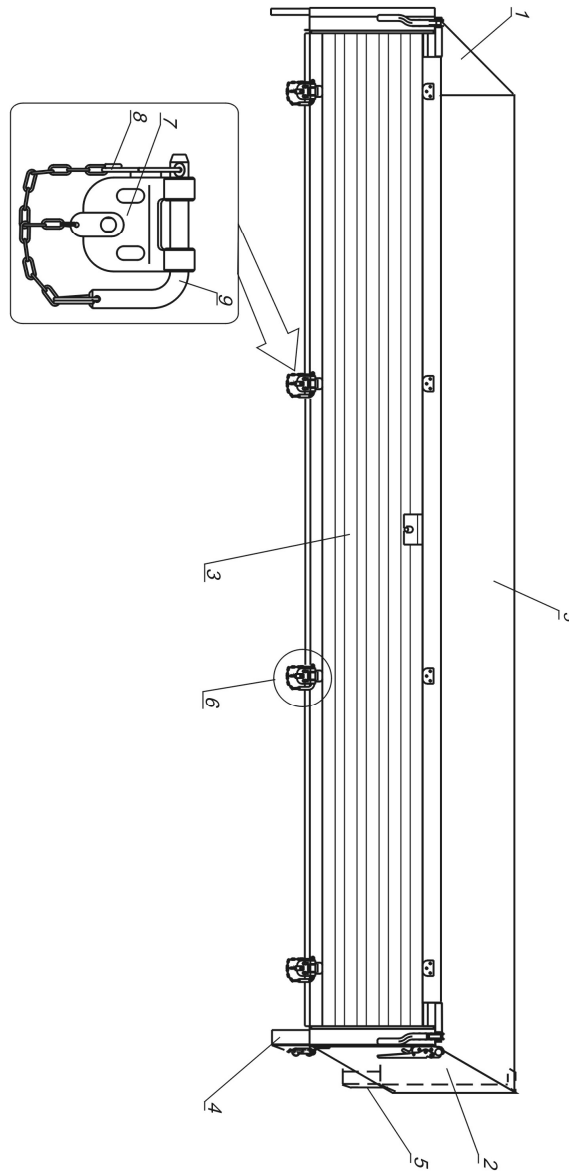


Fig. 19 Set of superstructures

No.	Description (Drawing No.: 19)	No. of drawing/standard	Qty					
			T654	T654/DK	T654/A	T654/1	T654/1/DK	T654/1A
	Set of superstructures	37RPN-08.00.000	-	-	-	1	1	1
1	Front superstructure	37RPN-05.00.000	-	-	-	1	1	1
2	Rear superstructure	37RPN-06.00.000	-	-	-	1	1	1
3	Side superstructure	37RPN-07.00.000	-	-	-	2	2	2
4	Superstructure left post	29RPN-00.03.000	-	-	-	1	1	1
5	Superstructure right post	29RPN-00.04.000	-	-	-	1	1	1
6	Lower lug of superstructure hinge, set	29RPN-14.06.000	-	-	-	10	10	10
7	Lower lug of superstructure hinge	29RPN-14.06.100	-	-	-	10	10	10
8	Cotter pin kpl.	29RPN-14.06.200	-	-	-	10	10	10
9	Bolt	29RPN-14.06.001	-	-	-	10	10	10

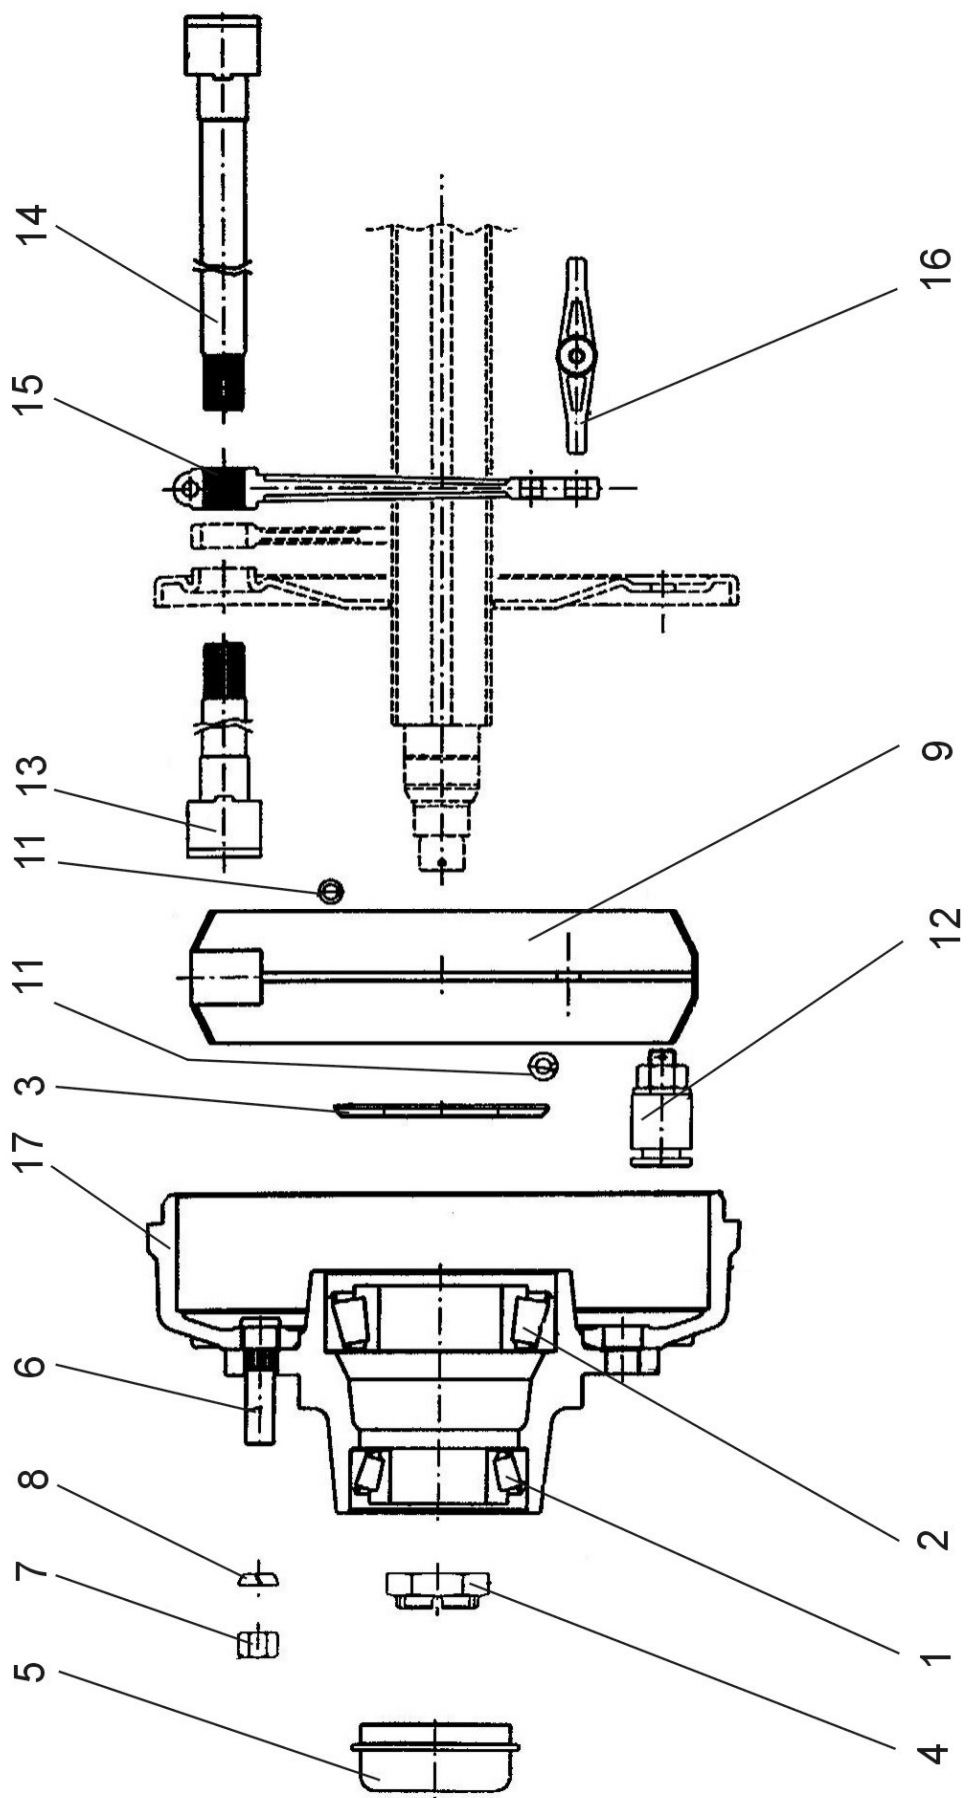


Fig. 20 Axle

No.	Description (Drawing No.: 20)	No. of drawing/standard	Qty
	Axle, set	44.00	1
1	Bearing	44.01	2
2	Bearing	44.02	2
3	Sealing ring	44.03	2
4	Crown nut	44.04	2
5	Cover	44.05	2
6	Stud	44.06	12
7	Nut M18x1,5	44.07	12
8	Washer	44.08	12
9	Brake shoe	44.09	4
10	Front spring	44.10	2
11	Rear spring	44.11	2
12	Bolt	44.12	2
13	Camshaft, left	44.13	1
14	Camshaft, right	44.14	1
15	Brake lever	44.15	2
16	Cross bar	44.16	1
17	Solid drum hub	44.17	2

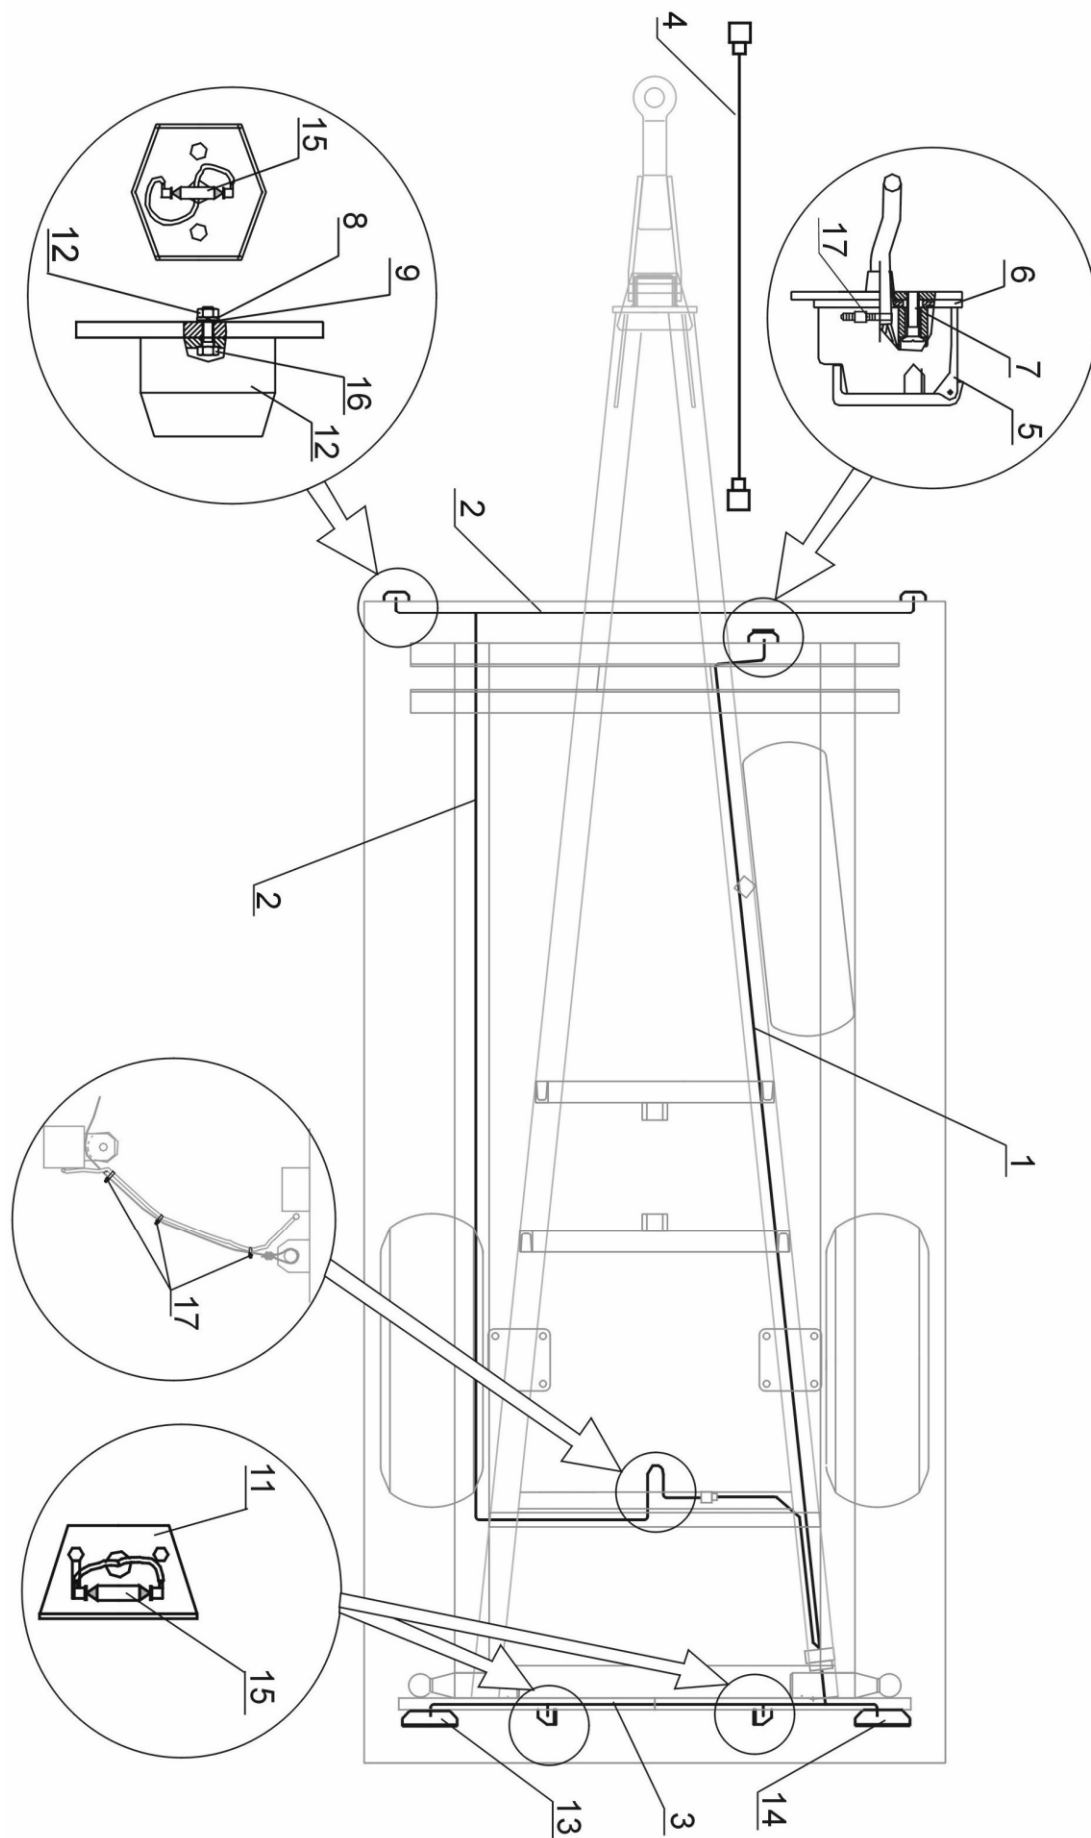


Fig. 21 Wiring

No.	Description (Drawing No.: 21)	No. of drawing/standard	Qty					
			T654	T654/DK	T654/A	T654/1	T654/1/DK	T654/1A
	Wiring, set	37RPN-10.00.000	1	1	1	1	1	1
1	Central bundle	37RPN-10.01.00	1	1	1	1	1	1
2	Front bundle	37RPN-10.02.00	1	1	1	1	1	1
3	Rear bundle	37RPN-10.03.00	1	1	1	1	1	1
4	Connection cable	37RPN-10.04.00	1	1	1	1	1	1
5	Socket GN-7 (X7)	8JB001941-002	1	1	1	1	1	1
13	Washer	006004.60	1	1	1	1	1	1
14	Screw M5x35-5.8 Fe/Zn5	PN/M-82207	3	3	3	3	3	3
15	Spring washer 5,1 Fe/Zn9	PN/M-82208	4	4	4	4	4	4
16	Washer 5,3 Fe/Zn5	PN/M-82005	4	4	4	4	4	4
17	Nut M5-8-Fe/Zn5	PN/M-82144	4	4	4	4	4	4
18	Number plate lamp	LT-120	2	2	2	2	2	2
19	Position lamp, front	LO-110PP	2	2	2	2	2	2
20	Compact lamp, rear, left	WE 549L	1	1	1	1	1	1
21	Compact lamp, rear, right	WE 549P	1	1	1	1	1	1
22	Light bulb C5W-SV8,5		4	4	4	4	4	4
23	Screw M5x25-B-5,8 Fe/Zn5	PN/M-82105	4	4	4	4	4	4
24	Tape clip 4,5x160	AC RZ-46KT	4	4	4	4	4	4

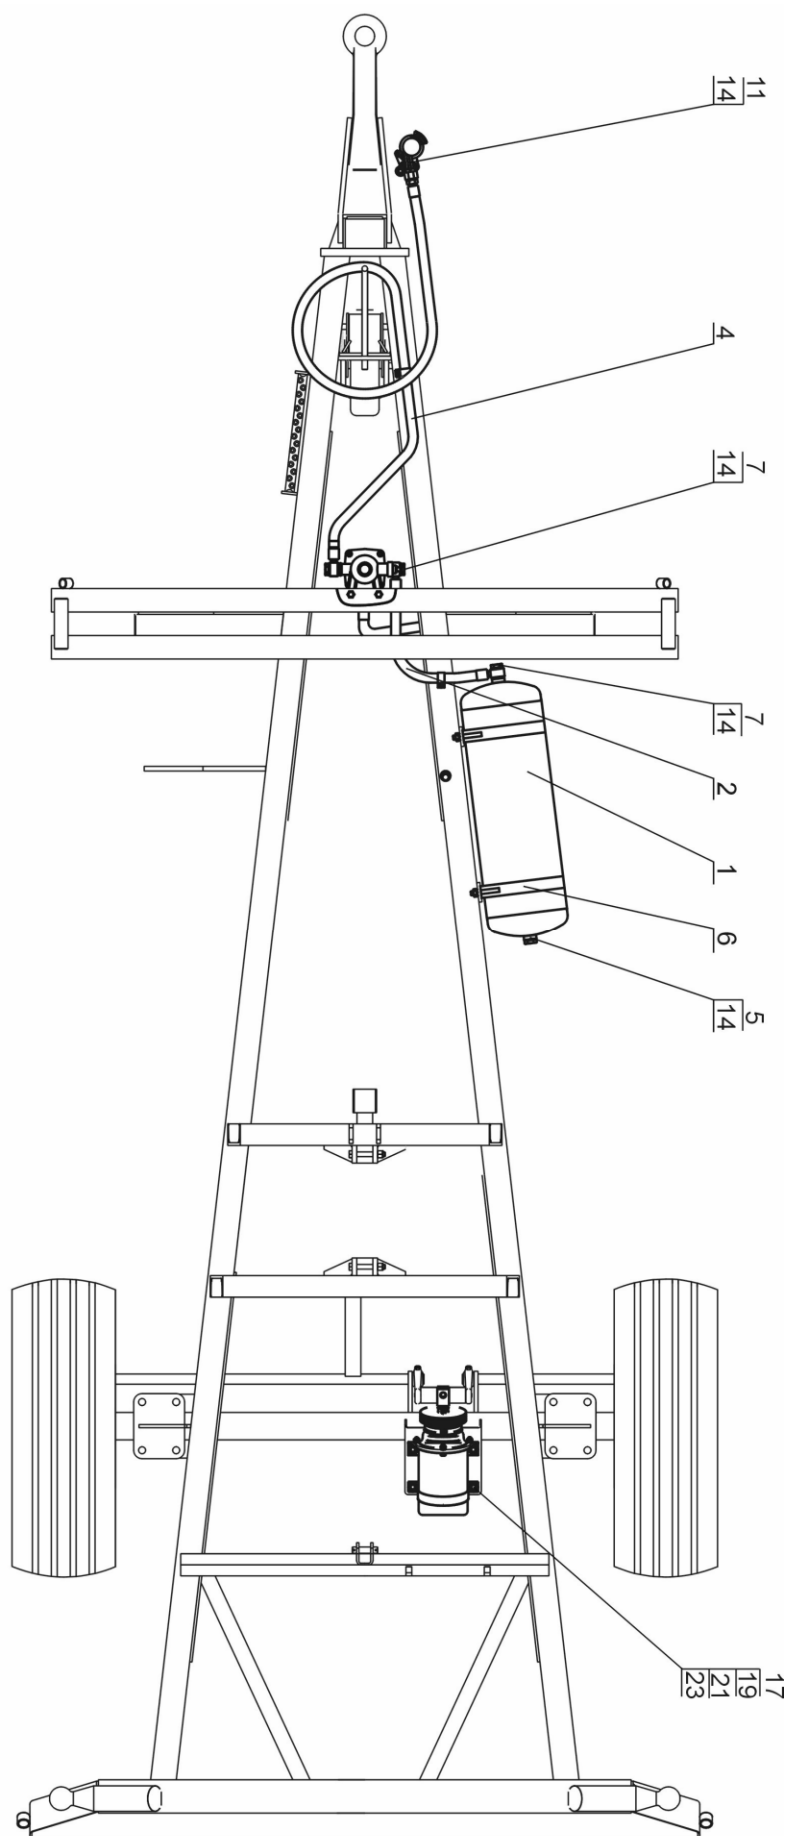


Fig. 22 Pneumatic system

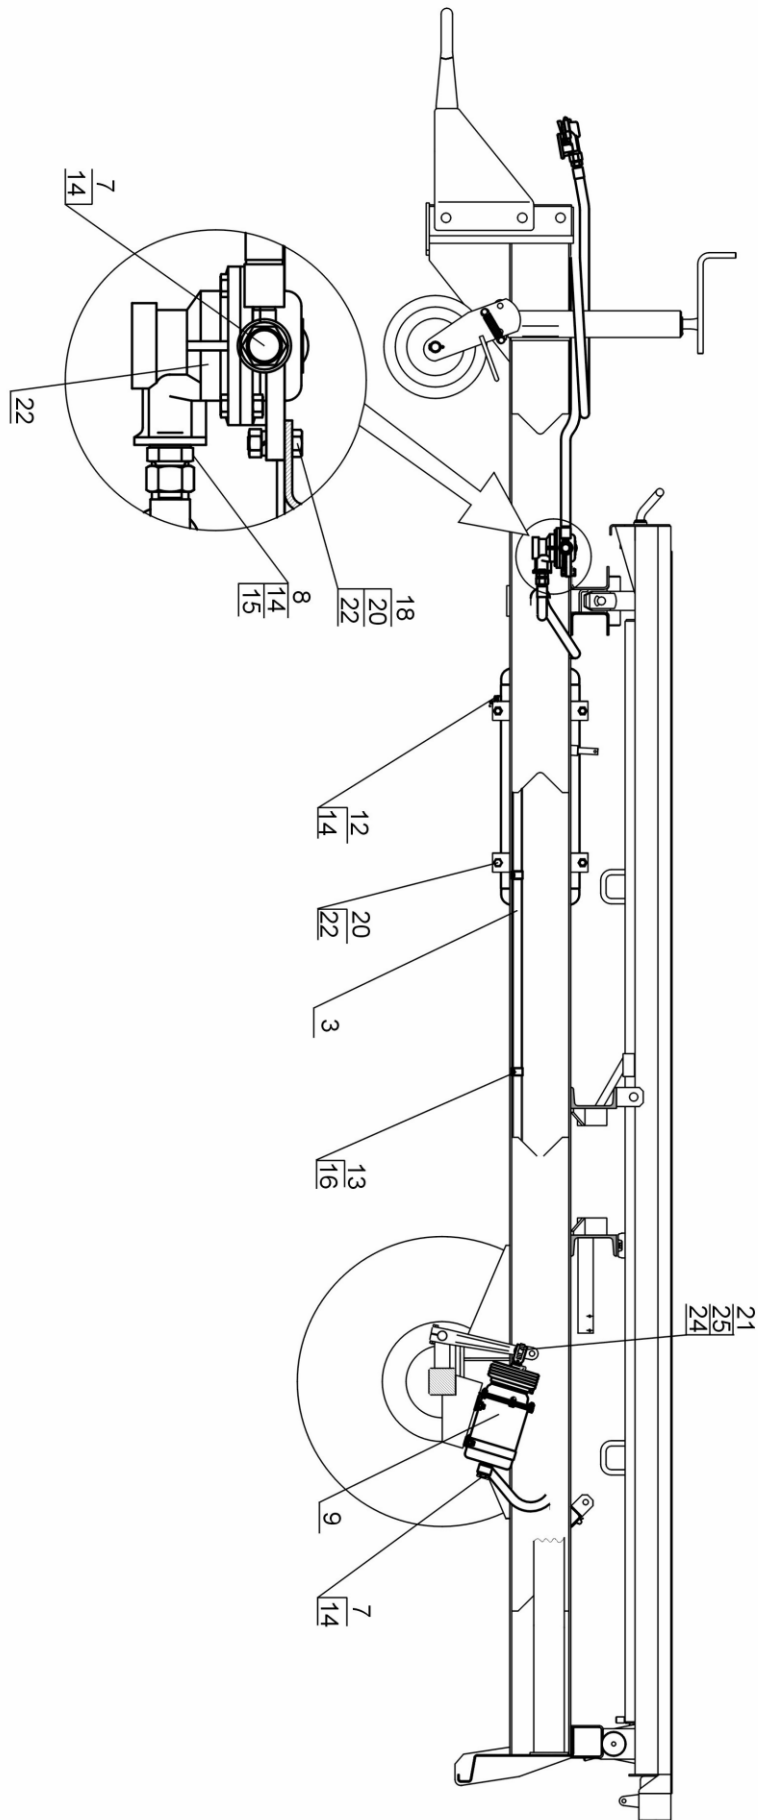


Fig. 23 Pneumatic system

No.	Description (Drawing Nos.: 22, 23)	No. of drawing/standard	Qty					
			T654	T654/DK	T654/A	T654/1	T654/1/DK	T654/1A
	Pneumatic system, set	37RPN-11.00.000	1	-	-	1	-	-
1	Air reservoir, 20 ltr	29RPN-11.01.000	1	-	-	1	-	-
2	Hose O-O 750	37RPN-11.01.000	1	-	-	1	-	-
	Hose O-O 600	41RPN-11.01.000	-	-	-	-	-	-
3	Hose O-W 3250	37RPN-11.02.000	1	-	-	1	-	-
	Hose O-W 2400	41RPN-11.02.000	-	-	-	-	-	-
4	Hose O-Z 2200	37RPN-11.03.000	1	-	-	1	-	-
5	Plug	29RPN-11.00.002	1	-	-	1	-	-
6	Air reservoir clip	29RPN-00.14.000	2	-	-	2	-	-
7	Connection screw	6RPN-01.00.10	4	-	-	4	-	-
8	Connector, short	6RPN-01.00.11	1	-	-	1	-	-
9	Pneumatic cylinder	Ø125x53.32.00/A	1	-	-	1	-	-
10	Control valve	44.11.011.0	1	-	-	1	-	-
11	Hose connector	87.30.010.0	1	-	-	1	-	-
12	Drain valve	83.10.012.0	1	-	-	1	-	-
13	Clip RIBENCLIP 22		4	-	-	4	-	-
14	Washer Cu 27/22/2		12	-	-	12	-	-
15	Washer Cu 20/12.5/2		1	-	-	1	-	-
16	Self-tapping screw Ø5.5x19	DIN-7504-K	4	-	-	4	-	-
17	Screw M12x30-5.8-B-Fe/Zn5	PN-85/M-82105	4	-	-	4	-	-
18	Screw M10x35-5.8-B-Fe/Zn5	PN-85/M-82105	2	-	-	2	-	-
19	Nut M12-5-B-Fe/Zn5	PN-86/M-82144	4	-	-	4	-	-
20	Nut M10-5-B-Fe/Zn5	PN-86/M-82144	6	-	-	6	-	-
21	Washer 12.5-Fe/Zn5	PN-78/M-82005	6	-	-	6	-	-
22	Washer Z10.2-Fe/Zn5	PN-77/M-82008	6	-	-	6	-	-
23	Spring washer Z12.2-Fe/Zn5	PN-77/M-82008	4	-	-	4	-	-
24	Bolt	29RPN-11.00.004	1	-	-	1	-	-
25	Cotter pin S-Zn 3.2x25	PN-76/M-82001	2	-	-	2	-	-

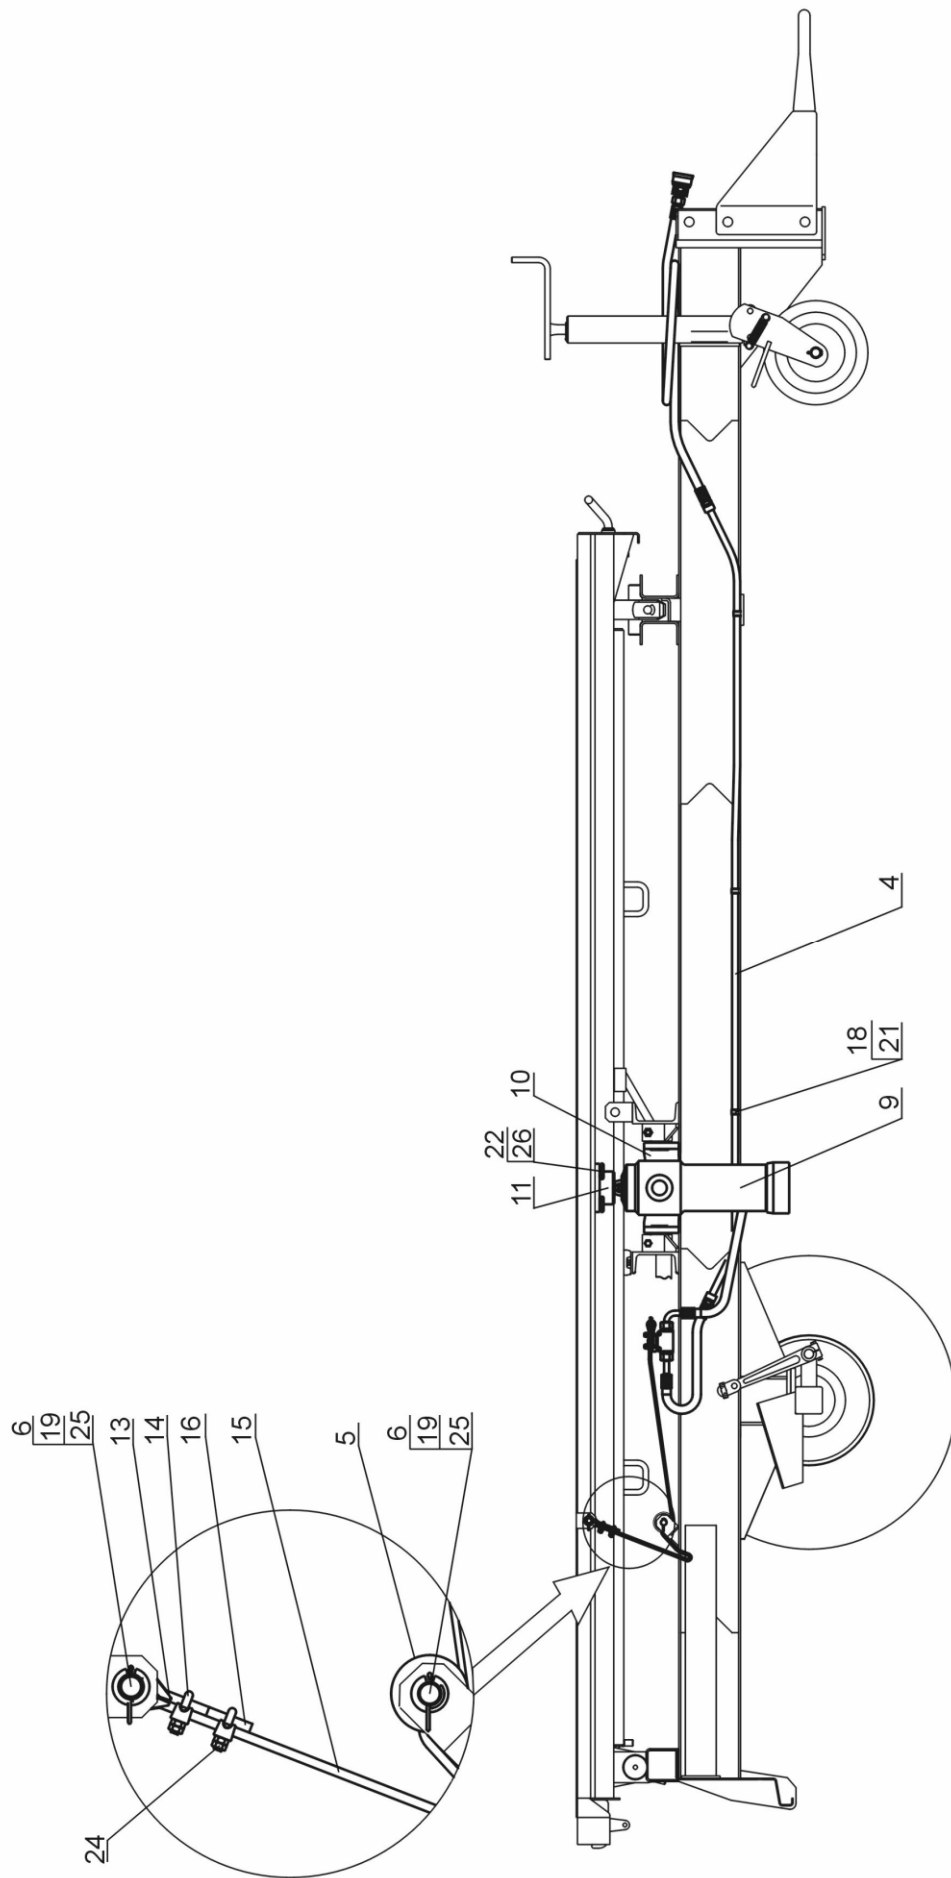


Fig. 24 Hydraulic system

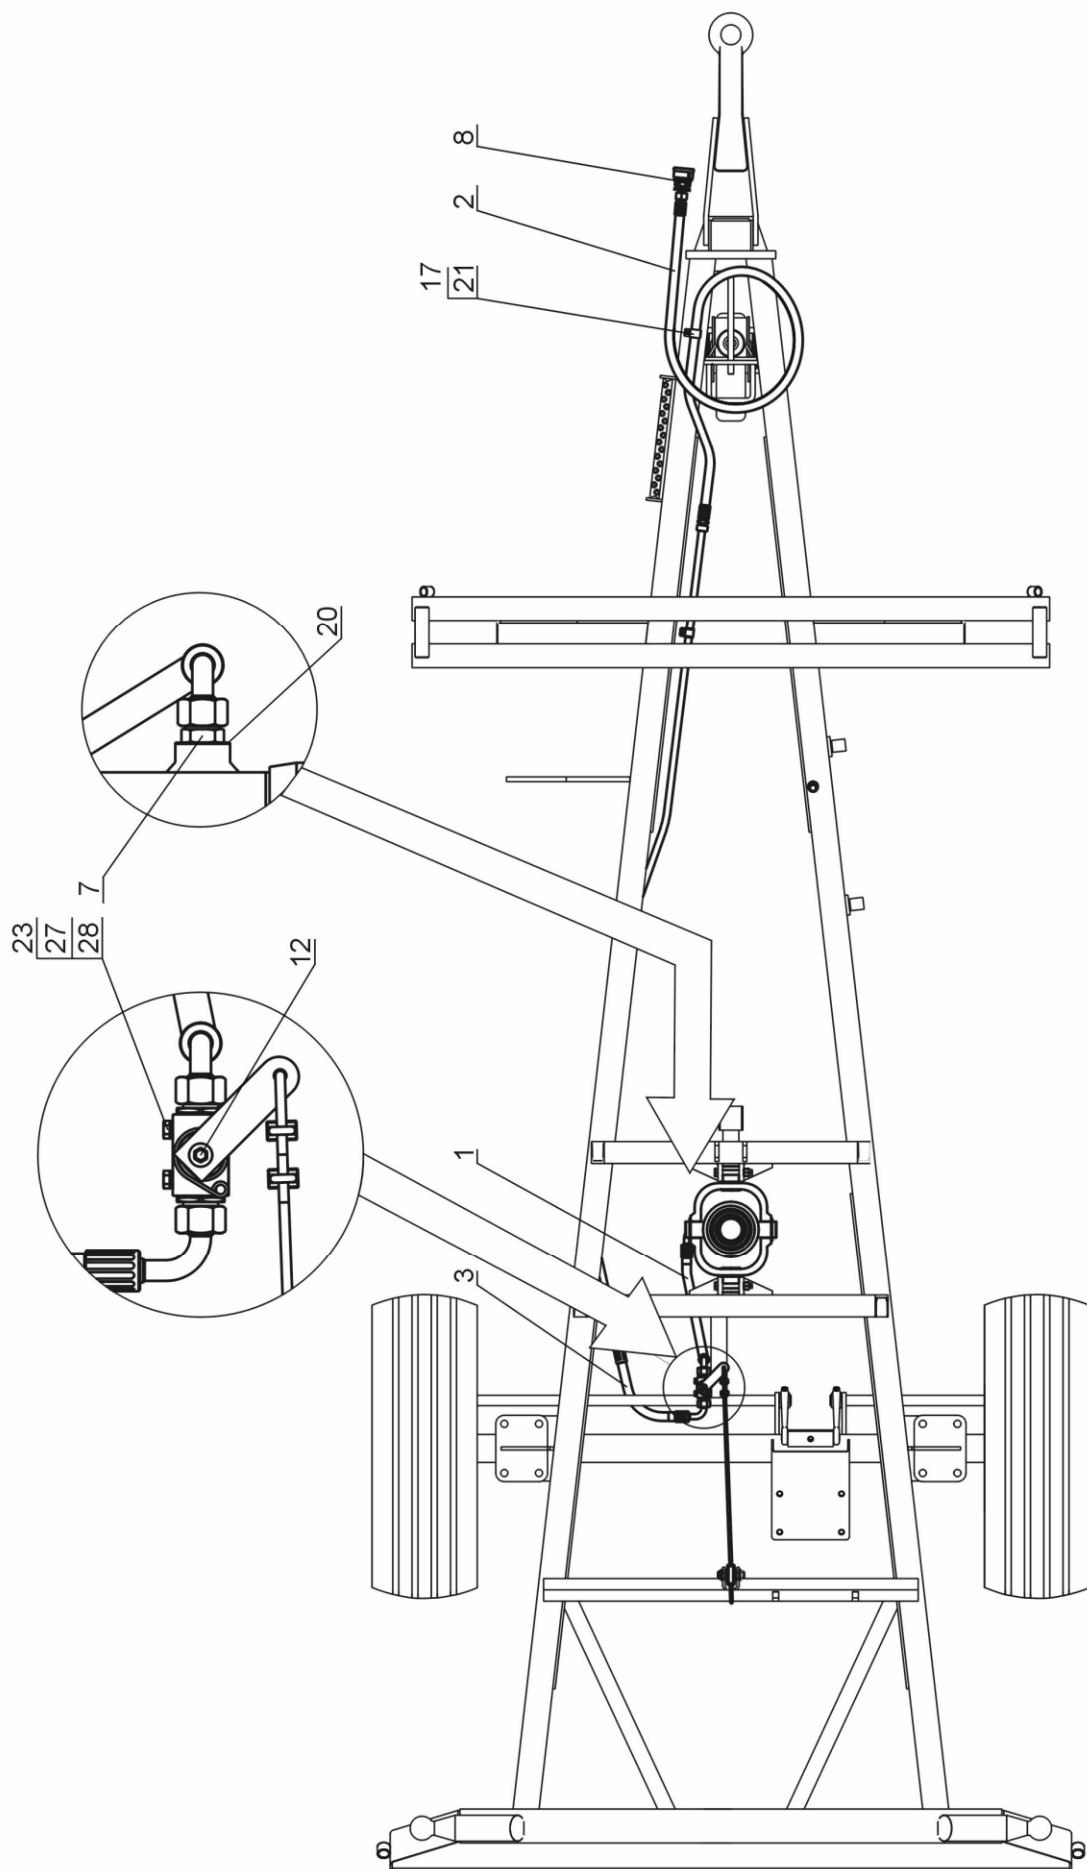


Fig. 25 Hydraulic system

No.	Description (Drawing Nos.: 24, 25)	No. of drawing/standard	Qty					
			T654	T654/DK	T654/A	T654/1	T654/1/DK	T654/1A
	Hydraulic system, set	37RPN-12.00.000	1	-	-	1	-	-
1	Hose DN13 H17.8 H17.8 750	37RPN-12.01.000	1	-	-	1	-	-
2	Hose DN13 H2.12 H4.13 2000	37RPN-12.02.000	1	-	-	1	-	-
3	Hose DN13 H17.8 H4.13 700	37RPN-12.03.000	1	-	-	1	-	-
4	Hydraulic pipe	37RPN-12.04.000	1	-	-	1	-	-
5	Rope wheel	29RPN-13.00.001	1	-	-	1	-	-
6	Wheel axle	29RPN-13.00.002	2	-	-	2	-	-
7	Connector	12RPN-18.00.02	1	-	-	1	-	-
8	Quick release connector – plug	ZSR32-W01	1	-	-	1	-	-
9	Telescop. cylinder CT-S224-16-60/4/1300		1	-	-	1	-	-
10	Cylinder hinge ZCT-105		1	-	-	1	-	-
11	Ball bearing 55 ŁK-55/0.00		1	-	-	1	-	-
12	Cut off valve Pister	HBKH-15L-DN13 456.01.120	1	-	-	1	-	-
13	Rope thimble A6 oc	PN-66/M-80247	1	-	-	1	-	-
14	Bail clip 6.5 oc	PN-73/M-80241	4	-	-	4	-	-
15	Steel rope Ø5.5 T6x37+Ao l=1350		1	-	-	1	-	-
16	Heat-shrinkable pipe PBF 12/6 l=30	PN-89/C-89209	2	-	-	2	-	-
17	Clip RIBENCLIP 22		1	-	-	1	-	-
18	Clip RIBENCLIP 16		3	-	-	3	-	-
19	Cotter pin S-Zn 4x32	PN-76/M-82001	4	-	-	4	-	-
20	Washer Cu. 27/22/2		1	-	-	1	-	-
21	Self-tapping screw Ø5.5x19		4	-	-	4	-	-
22	Screw M12x35-8.8-B-Fe/Zn5	PN-85/M-82105	4	-	-	4	-	-
23	Screw M6x45-5.8-B-Fe/Zn5	PN-85/M-82101	2	-	-	2	-	-
24	Nut M5-5-B-Fe/Zn5	PN-86/M-82144	8	-	-	8	-	-
25	Washer 17 Fe/Zn5	PN-78/M-82005	4	-	-	4	-	-
26	Washer Z 12.2-Fe/Zn5	PN-78/M-82008	4	-	-	4	-	-
27	Washer 6.4-Fe/Zn5	PN-78/M-82005	2	-	-	2	-	-
28	Spring washer. Z6.1-Fe/Zn5	PN-77/M-82008	2	-	-	2	-	-

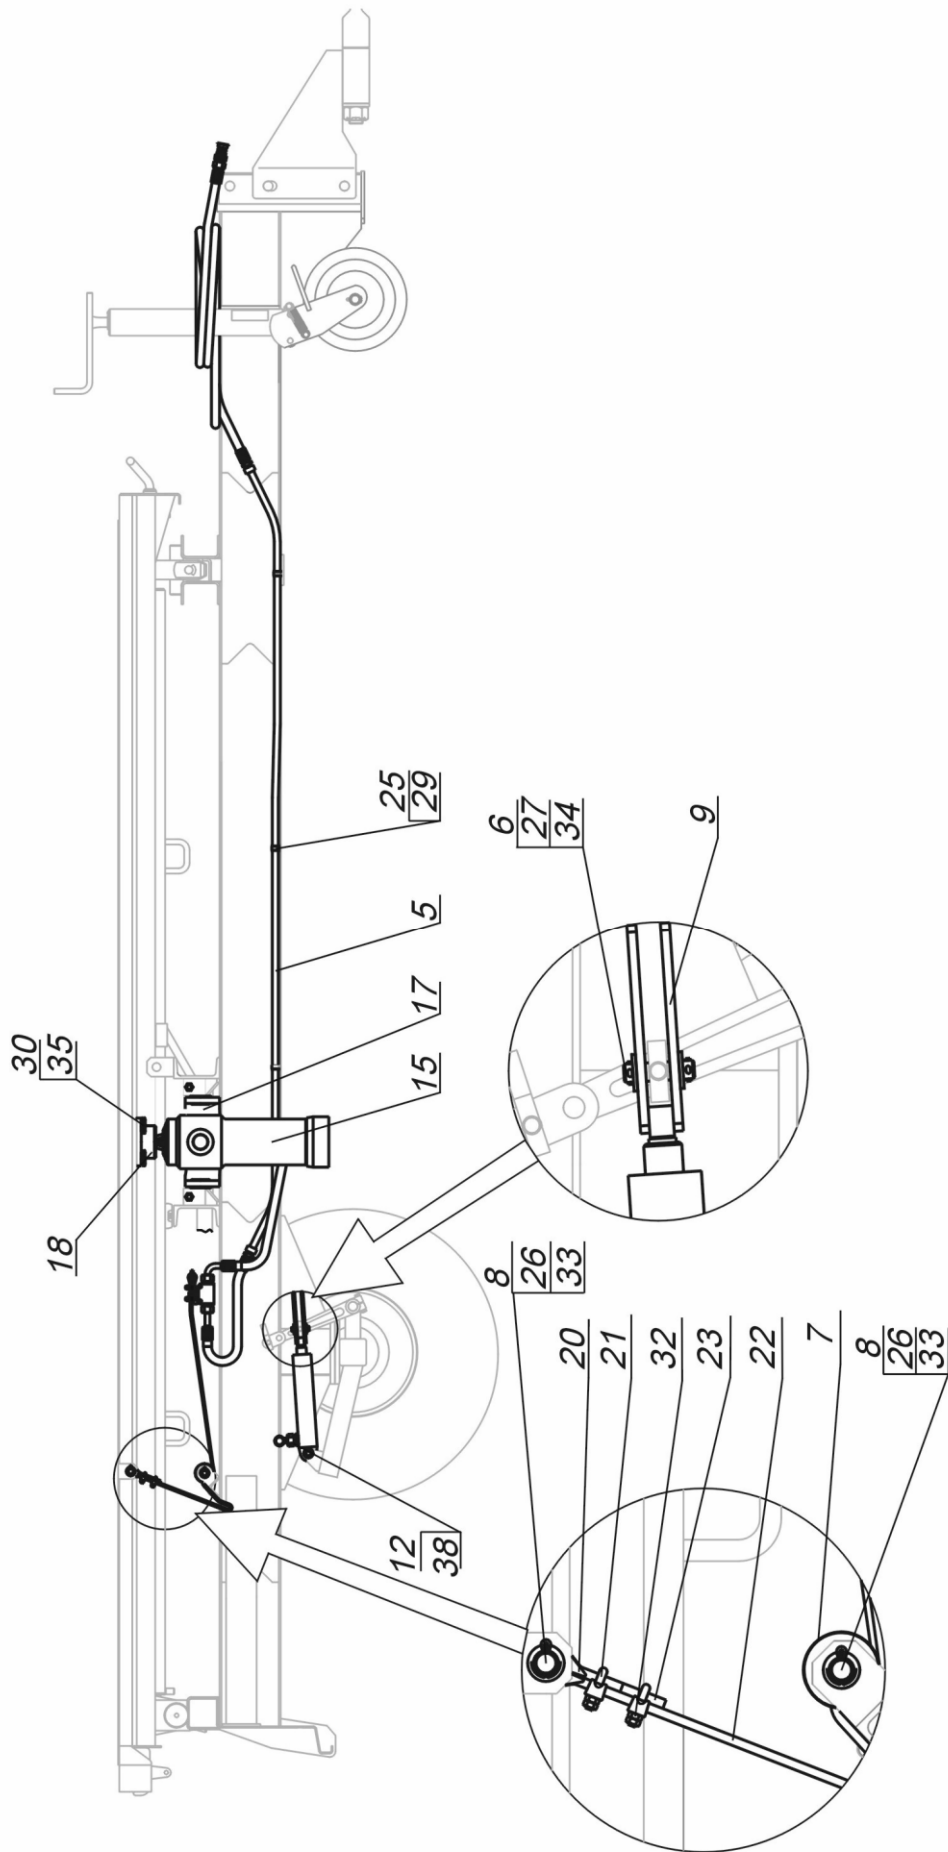


Fig. 26 Hydraulic system (with hydraulic brakes)

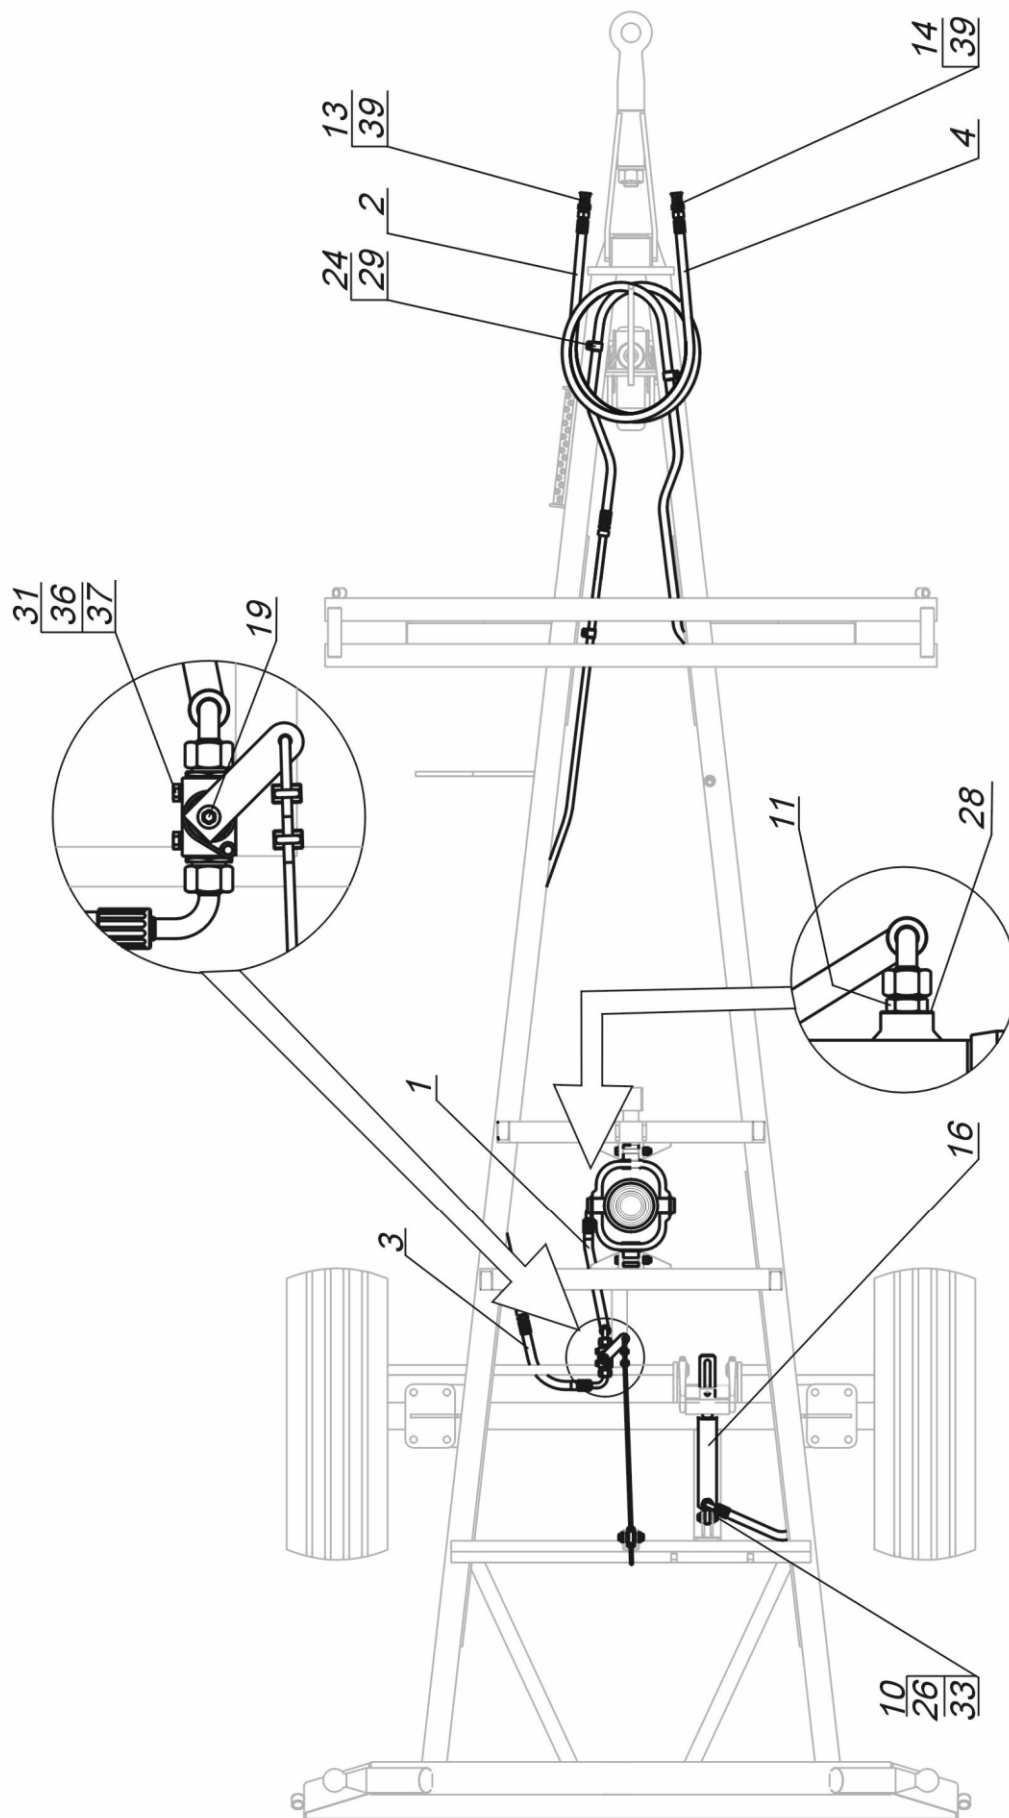


Fig. 27 Hydraulic system (with hydraulic brakes)

No.	Description (Drawing Nos.: 26, 27)	No. of drawing/standard	Qty					
			T654	T654/DK	T654/A	T654/1	T654/1/DK	T654/1A
	Hydraulic system, set	37RPN-19.00.000	-	1	1	-	1	1
1	Hose DN13 H17.8 H17.8 750	37RPN-12.01.000	-	1	1	-	1	1
2	Hose DN13 H2.12 H4.13 2000	37RPN-12.02.000	-	1	1	-	1	1
3	Hose DN13 H17.8 H4.13 700	37RPN-12.03.000	-	1	1	-	1	1
4	Hose	37RPN-19.01.000	-	1	1	-	1	1
5	Hydraulic pipe	37RPN-12.04.000	-	1	1	-	1	1
6	Bolt	29RPN-11.00.004	-	1	1	-	1	1
7	Rope wheel	29RPN-13.00.001	-	1	1	-	1	1
8	Wheel axle	29RPN-13.00.002	-	2	2	-	2	2
9	Fork tip	37RPN-19.02.000	-	1	1	-	1	1
10	Cylinder bolt	37RPN-19.00.003	-	1	1	-	1	1
11	Connector	12RPN-18.00.02	-	1	1	-	1	1
12	Connector	37RPN-19.00.002	-	1	1	-	1	1
13	Quick release connector – plug ISO 12,5	Sz12-W01	-	1	1	-	1	1
14	Quick release connector – plug ISO 12,5	Sz12-W03	-	1	1	-	1	1
15	Telescop cylinder CT-S224-16-60/4/1300		-	1	1	-	1	1
16	Plunge cylinder CN2D-16-25/140z		-	1	1	-	1	1
17	Cylinder hinge ZCT-105		-	1	1	-	1	1
18	Ball bearing 55 ŁK-55/0.00		-	1	1	-	1	1
19	Cut off valver	HBKH-15L-DN13	-	1	1	-	1	1
20	Rope thimble A6 oc	PN-66/M-80247	-	1	1	-	1	1
21	Bail clip 6.5 oc	PN-73/M-80241	-	4	4	-	4	4
22	Steel rope Ø5.5 T6x37+Ao l=1350		-	1	1	-	1	1
23	Heat-shrinkable pipe PBF 12/6 l=30	PN-89/C-89209	-	2	2	-	2	2
24	Clip RIBENCLIP 22		-	5	5	-	5	5
25	Clip RIBENCLIP 16		-	3	3	-	3	3
26	Cotter pin S-Zn 4x32	PN-76/M-82001	-	6	6	-	6	6
27	Cotter pin S-Zn 3.2x25	PN-76/M-82001	-	2	2	-	2	2
28	Washer Cu 27/22/2		-	1	1	-	1	1
29	Self-tapping screw Ø5.5x19	DIN-7504-K	-	8	8	-	8	8
30	Screw M12x35-8.8-B-Fe/Zn5	PN-85/M-82105	-	4	4	-	4	4
31	Screw M6x45-5.8-B-Fe/Zn5	PN-85/M-82101	-	2	2	-	2	2
32	Nut M5-5-B-Fe/Zn5	PN-86/M-82144	-	8	8	-	8	8
33	Washer 17 Fe/Zn5	PN-78/M-82005	-	4	4	-	4	4
34	Washer 12.5-Fe/Zn5	PN-78/M-82005	-	2	2	-	2	2
35	Washer Z 12.2-Fe/Zn5	PN-78/M-82008	-	4	4	-	4	4
36	Washer 6.4-Fe/Zn5	PN-78/M-82005	-	2	2	-	2	2
37	Spring washer Z6.1-Fe/Zn5	PN-77/M-82008	-	2	2	-	2	2
38	Sealing ring 11,3x2,4	PN-60/M-86961	-	1	1	-	1	1
39	Plug cap ISO 12,5		-	2	2	-	2	2

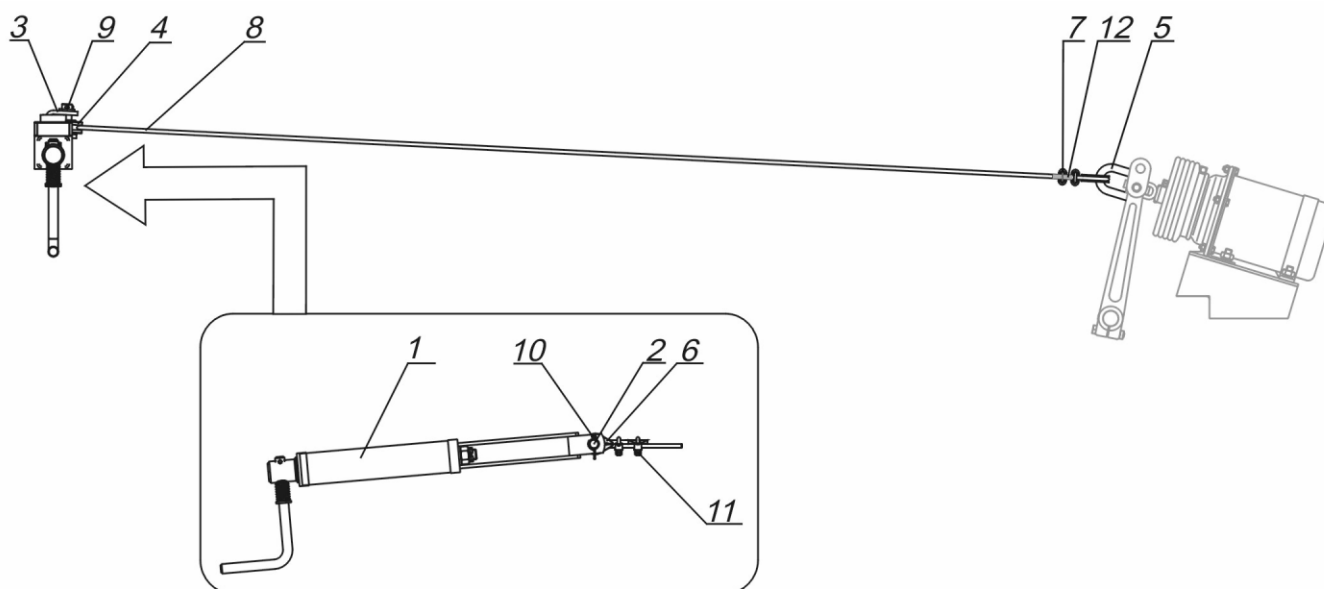


Fig. 28 Parking brake

No.	Description (Drawing Nos.: 28)	No. of drawing/standard	Qty					
			T654	T654/DK	T654/A	T654/1	T654/1/DK	T654/1A
	Parking brake, set	37RPN-17.00.000	1	1	-	1	1	-
1	Brake mechanism	29RPN-12.01.000	1	1	-	1	1	-
2	Bolt	29RPN-12.00.001	1	1	-	1	1	-
3	Rope clip	29RPN-01.00.018	1	1	-	1	1	-
4	Rope wheel	29RPN-13.00.001	1	1	-	1	1	-
5	Screw shackle S.2768	SPAREX	1	1	-	1	1	-
6	Rope thimble A6 oc	PN-66/M-80247	2	2	-	2	2	-
7	Bail clip 6.5 oc	PN-73/M-80241	4	4	-	4	4	-
8	Steel rope Ø5.5 T6x37 + Ao l=2400mm		1	1	-	1	1	-
9	Washer 17 Fe/Zn5	PN-78/M-82005	1	1	-	1	1	-
10	Cotter pin S-Zn-4x40	PN-76/M-82001	3	3	-	3	3	-
11	Nut M5-5-B Fe/Zn5	PN-86/M-82144	8	8	-	8	8	-
12	Heat-shrinkable pipe PBF 12/6 l=30	PN-89/C-89209	2	2	-	2	2	-

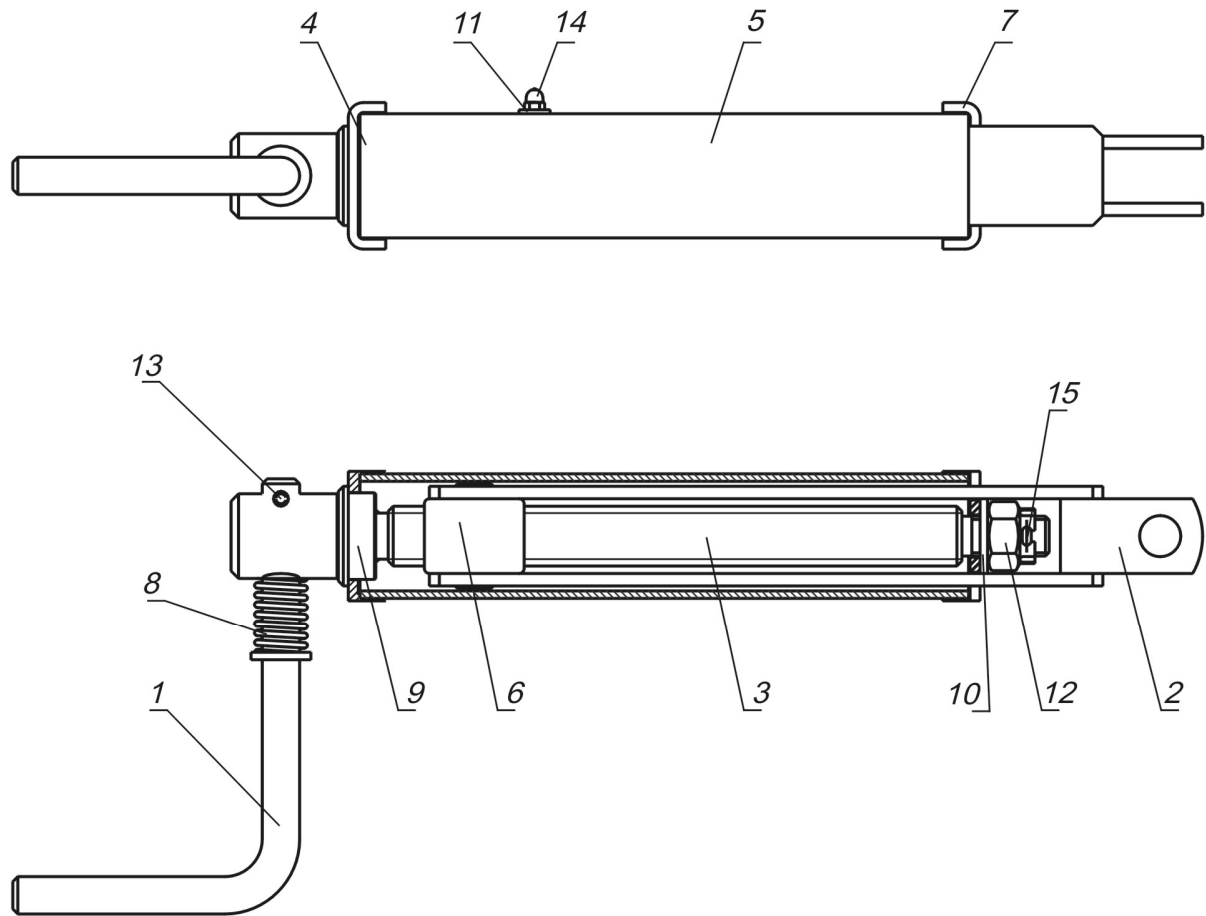


Fig. 29 Brake mechanism

No.	Description (Drawing No.: 29)	No. of drawing/standard	Qty					
			T654	T654/DK	T654/A	T654/1	T654/1/DK	T654/1A
	Brake mechanism, set	29RPN-12.01.000	1	1	-	1	1	-
1	Crank, set	29RPN-12.01.100	1	1	-	1	1	-
2	Pull rod, set	29RPN-12.01.200	1	1	-	1	1	-
3	Screw, set	29RPN-12.01.300	1	1	-	1	1	-
4	Blind plug, set	29RPN-12.01.400	1	1	-	1	1	-
5	Body	29RPN-12.01.001	1	1	-	1	1	-
6	Nut	29RPN-12.01.002	1	1	-	1	1	-
7	Blind plug, set	29RPN-12.01.003	1	1	-	1	1	-
8	Spring	29RPN-12.01.004	1	1	-	1	1	-
9	Bush	29RPN-12.01.005	1	1	-	1	1	-
10	Washer 17	PN-78/M-82005	1	1	-	1	1	-
11	Washer 6.4	PN-78/M-82005	1	1	-	1	1	-
12	Crown nut K M16-5-C-Fe/Zn5	PN-86/M-82148	1	1	-	1	1	-
13	Spring stud 6x24	PN-89/M-85023	1	1	-	1	1	-
14	Grease nipple M6	PN-79/M-86002	1	1	-	1	1	-
15	Cotter pin S-Zn 4x32	PN-76/M-82001	1	1	-	1	1	-

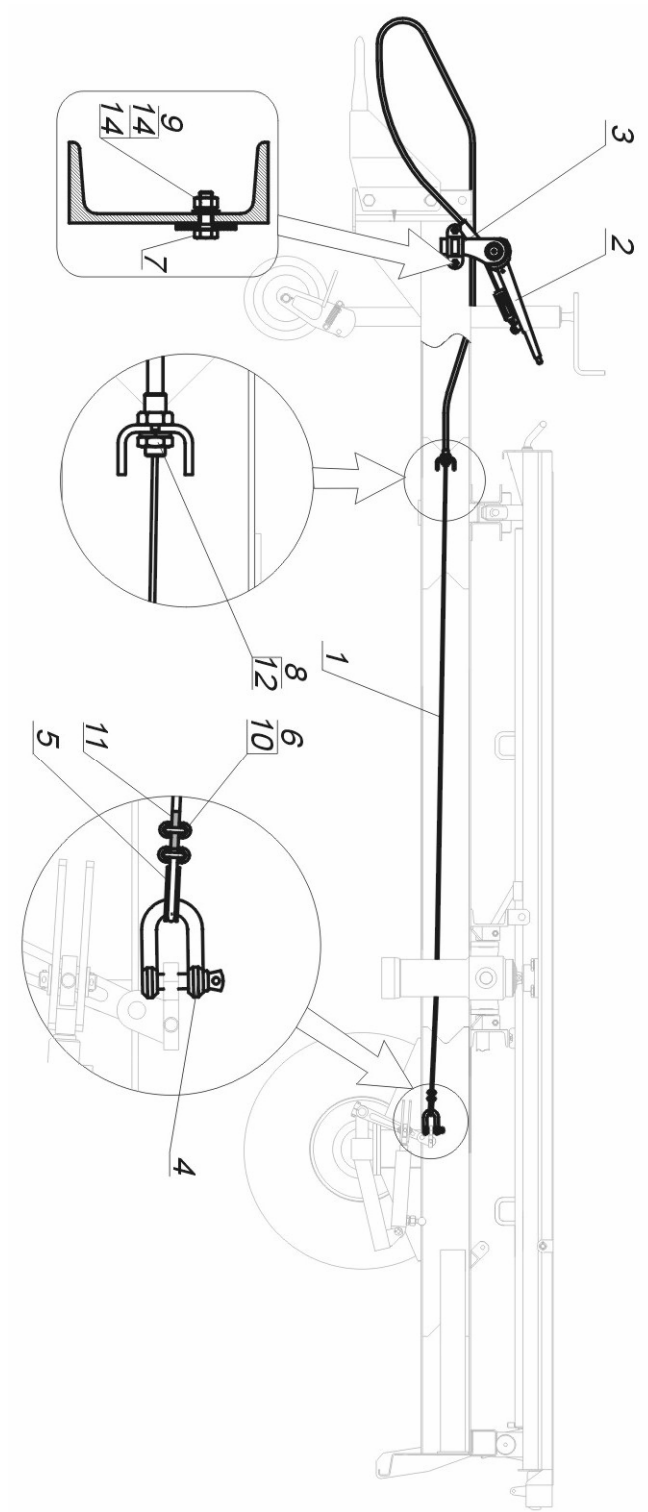


Fig. 30 Hand brake

No.	Description (Drawing No.: 30)	No. of drawing/standard	Qty					
			T654	T654/DK	T654/A	T654/1	T654/1/DK	T654/1A
	Hand brake, set	37RPN-22.00.000	-	-	1	-	-	1
1	Steel rope, set	37RPN-22.01.000	-	-	1	-	-	1
2	Breake lever Art-070015 Fliegl		-	-	1	-	-	1
3	Joint Art-070020 Fliegl		-	-	2	-	-	2
4	Screw shackle S.2768		-	-	1	-	-	1
5	Rope thimble A6 oc	PN-66/M-80247	-	-	1	-	-	1
6	Bail clip 6.5 oc	PN-73/M-80241	-	-	2	-	-	2
7	Screw M10x30-8.8-B-Fe/Zn5	PN-85/M-82105	-	-	2	-	-	2
8	Nut M16-04-B-Fe/Zn5	PN-86/M-82153	-	-	1	-	-	1
9	Nut M10-5-B-Fe/Zn5	PN-86/M-82144	-	-	2	-	-	2
10	Nut M5-5-B-Fe/Zn5	PN-86/M-82144	-	-	4	-	-	4
11	Heat-shrinkable pipe PBF 12/6 l=30	BN-89/C-89209	-	-	1	-	-	1
12	Washer Z16.3 Fe/Zn9	PN-77/M-82008	-	-	1	-	-	1
13	Washer 10.5 Fe/Zn5	PN-78/M-82005	-	-	2	-	-	2
14	Washer Z10.2 Fe/Zn5	PN-77/M-82008	-	-	2	-	-	2

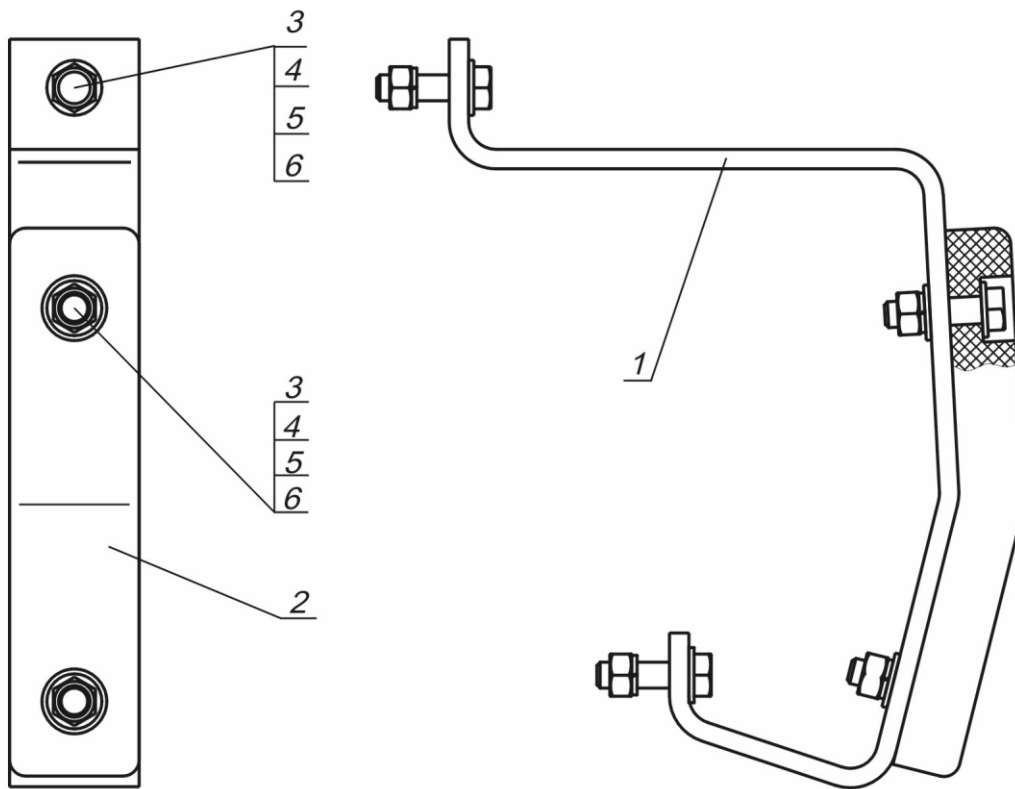


Fig. 31 Bumper

No.	Description (Drawing No.: 31)	No. of drawing/standard	Qty					
			T654	T654/DK	T654/A	T654/1	T654/1/DK	T654/1A
	Bumepr, set	37RPN-00.00.100	1	1	1	1	1	1
1	Bumper console	37RPN-00.00.101	1	1	1	1	1	1
2	Strap	29RPN-00.00.003	1	1	1	1	1	1
3	Screw M8x30-5.8-B-Fe/Zn5	PN-85/M-82105	4	4	4	4	4	4
4	Nut M8-5-B-Fe/Zn5	PN-86/M-82144	4	4	4	4	4	4
5	Washer 8.5 Fe/Zn5	PN-78/M-82005	6	6	6	6	6	6
6	Spring washer Z8.2 Fe/Zn9	PN-77/M-82008	4	4	4	4	4	4

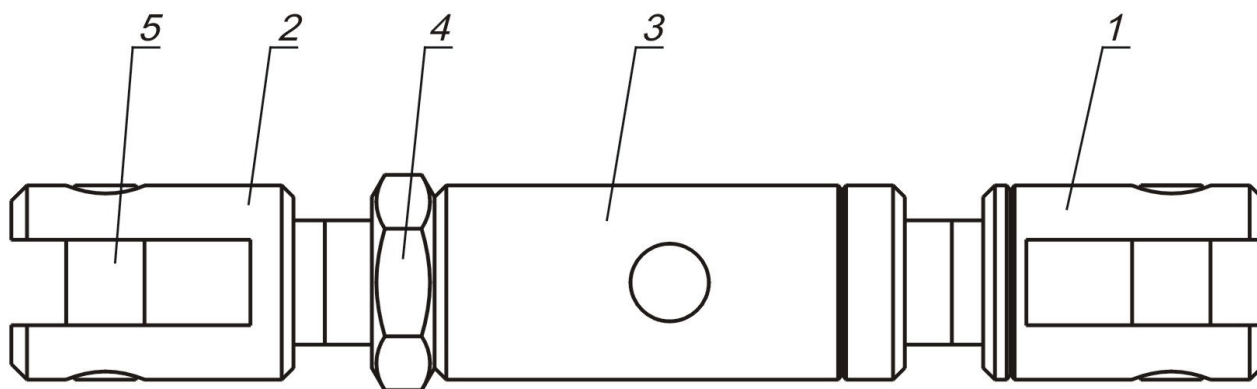


Fig. 32 Pull rod

No.	Description (Drawing No.: 32)	No. of drawing/standard	Qty					
			T654	T654/DK	T654/A	T654/1	T654/1/DK	T654/1A
	Pull rod, set	29RPN-00.00.300	2	2	2	2	2	2
1	Screw, left	29RPN-00.00.301	2	2	2	2	2	2
2	Screw, right	29RPN-00.00.302	2	2	2	2	2	2
3	Bush	29RPN-00.00.303	2	2	2	2	2	2
4	Nut M16-05-B-Fe/Zn5	PN-86/M-82153	2	2	2	2	2	2
5	Spring stud 10x25	PN-89/M-85023	4	4	4	4	4	4

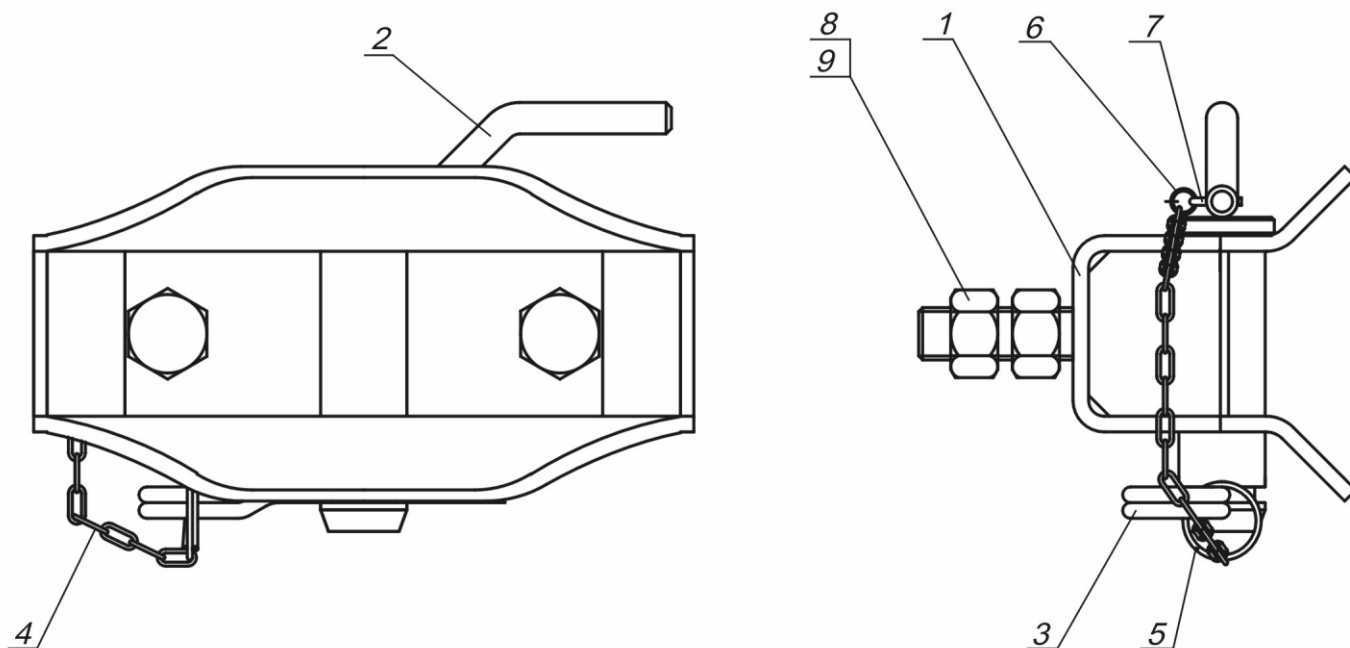


Fig. 33 Rear hook, set.

No.	Description (Drawing No.: 33)	No. of drawing/standard	Qty					
			T654	T654/DK	T654/A	T654/1	T654/1/DK	T654/1A
	Rear hook, set.	37RPN-00.09.000	1	1	1	1	1	1
1	Body	37RPN-00.09.100	1	1	1	1	1	1
2	Bolt, set	37RPN-00.09.200	1	1	1	1	1	1
3	Spring cotter pin 5x110-Fe/Zn6c	PN-ISO 7072	1	1	1	1	1	1
4	Sanitary chain L=250 mm		1	1	1	1	1	1
5	Wheel I	29RPN-14.06.203	1	1	1	1	1	1
6	Wheel II	29RPN-14.06.204	1	1	1	1	1	1
7	Cotter pin S-Zn-3.2x25	PN-76/M-82001	1	1	1	1	1	1
8	Screw M20x65-10.9-B-Fe/Zn	PN-85/M-82105	2	2	2	2	2	2
9	Nut M20-10-B-Fe/Zn5	PN-86/M-82144	4	4	4	4	4	4

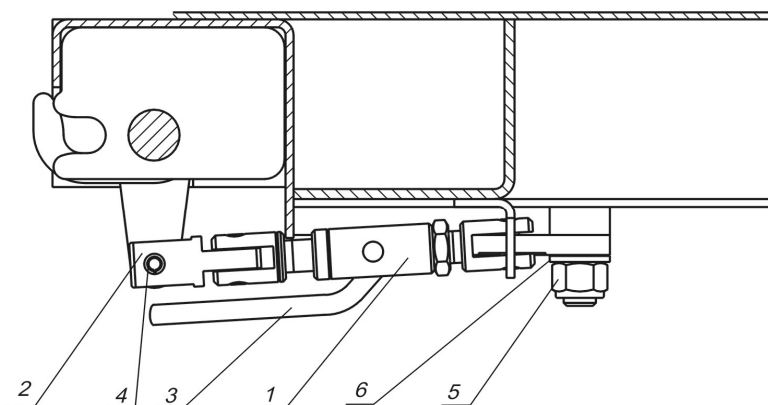


Fig. 34 Rear lock

No.	Description (Drawing No.: 34)	No. of drawing/standard	Qty					
			T654	T654/DK	T654/A	T654/1	T654/1/DK	T654/1A
	Rear lock, set	29RPN-00.02.000	1	1	1	1	1	1
1	Pull rod	29RPN-00.00.300	2	2	2	2	2	2
2	Connector	29RPN-00.02.001	1	1	1	1	1	1
3	Lever	29RPN-00.02.002	1	1	1	1	1	1
4	Spring stud 10x25	PN-89/M-85023	1	1	1	1	1	1
5	Nut M16-6-B Fe/Zn5	PN-85/M-82175	1	1	1	1	1	1
6	Washer 17 Fe/Zn5	PN-78/M-82005	1	1	1	1	1	1

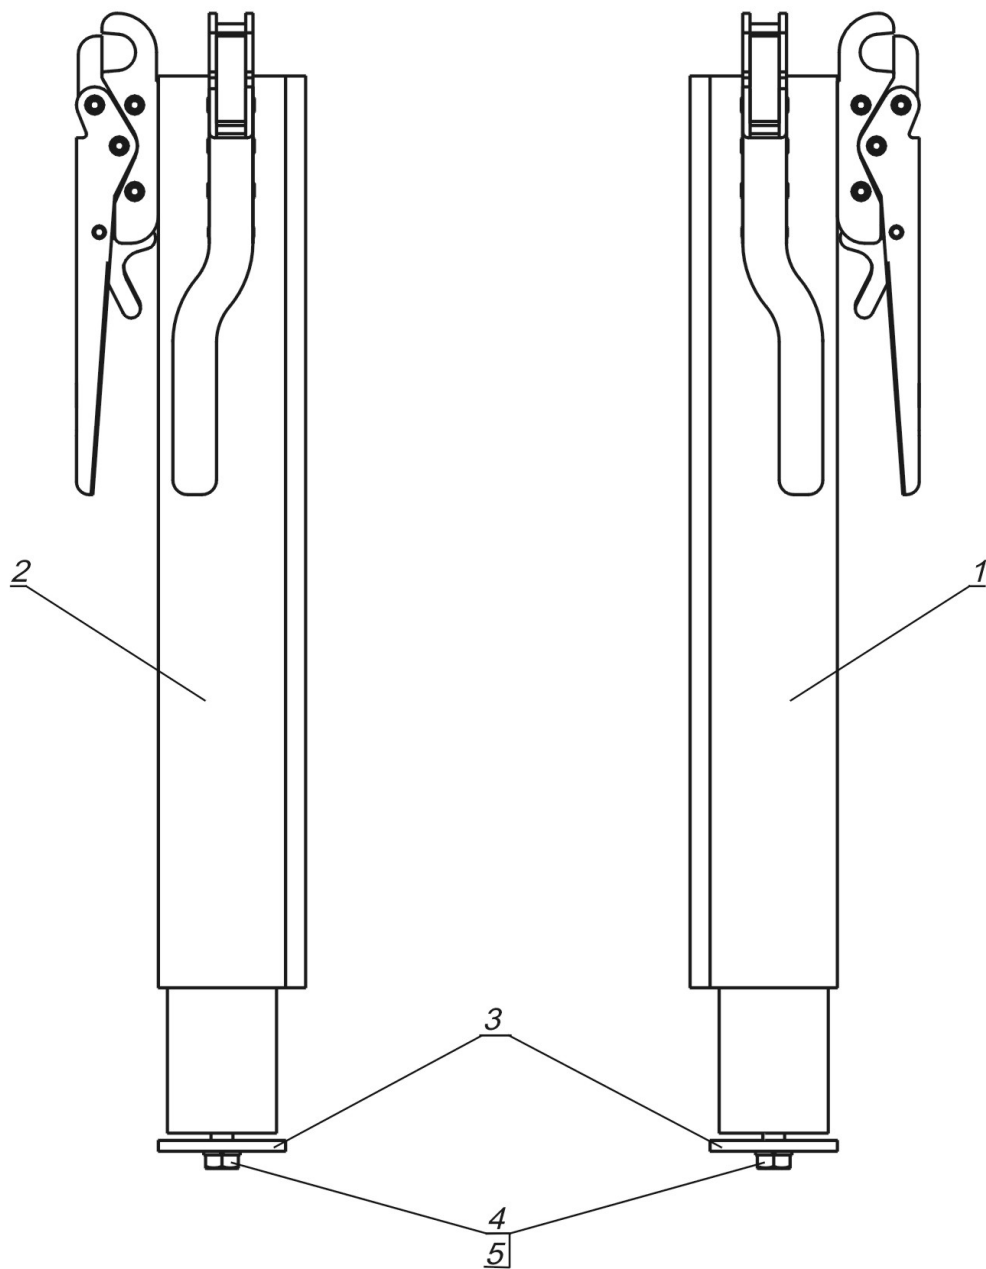


Fig. 35 Stake

No.	Description (Drawing No.: 35)	No. of drawing/standard	Qty					
			T654	T654/DK	T654/A	T654/1	T654/1/DK	T654/1A
1	Stake, left	37RPN-00.02.000	1	1	1	1	1	1
2	Stake, right	37RPN-00.01.000	1	1	1	1	1	1
3	Plate	29RPN-00.03.001	2	2	2	2	2	2
4	Screw M12x30-8.8-B-Fe/Zn5	PN-85/M-82105	2	2	2	2	2	2
5	Washer 12.2 Fe/Zn5	PN-77/M-82008	2	2	2	2	2	2

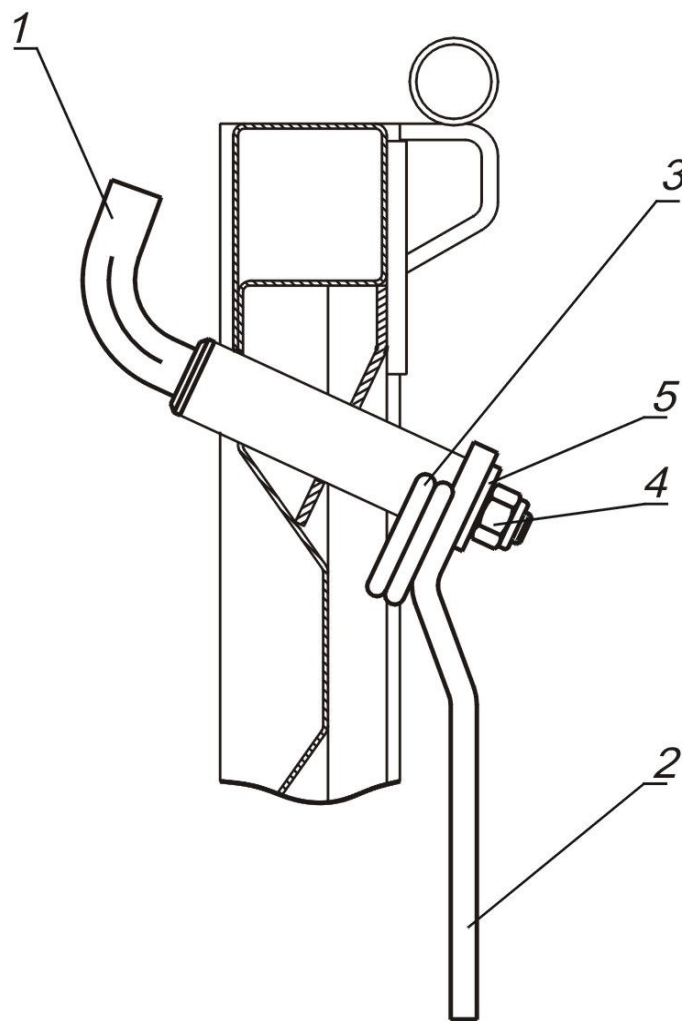


Fig. 36 Line disconnection mechanism

No.	Description (Drawing No.: 36)	No. of drawing/standard	Qty					
			T654	T654/DK	T654/A	T654/1	T654/1/DK	T654/1A
	Line disconnection mechanism, set	29RPN-00.05.000	2	2	2	4	4	4
1	Rope clip	29RPN-00.05.100	2	2	2	4	4	4
2	Handle	29RPN-00.05.001	2	2	2	4	4	4
3	Spring washer 5x110-Fe/Zn5	PN-ISO 7072	2	2	2	4	4	4
4	Nut M10-6-B Fe/Zn5	PN-85/M-82175	2	2	2	4	4	4
5	Washer 10.5 Fe/Zn5	PN-59/M-82030	2	2	2	4	4	4

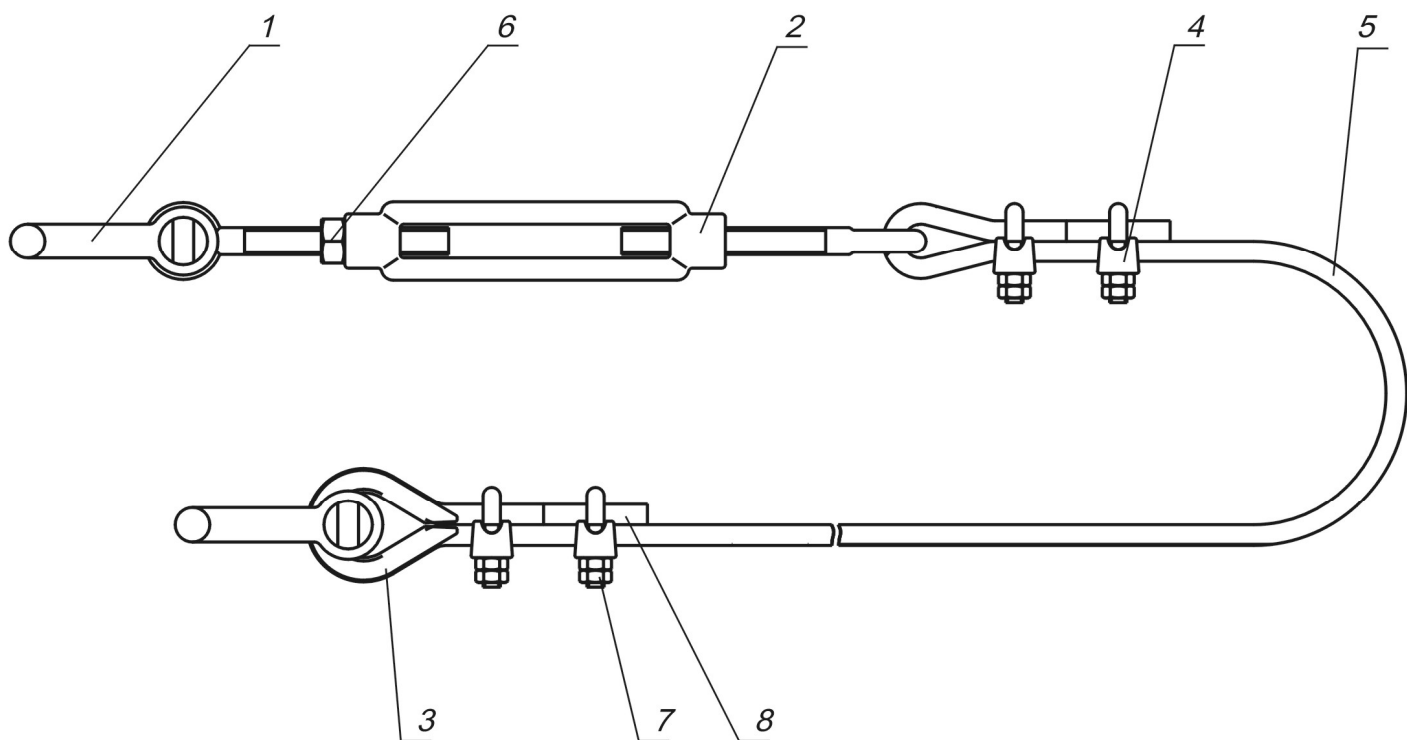


Fig. 37 Connecting cable

No.	Description (Drawing No.: 37)	No. of drawing/standard	Qty					
			T654	T654/DK	T654/A	T654/1	T654/1/DK	T654/1A
	Connecting cable, set	37RPN-00.05.000	1	1	1	2	2	2
1	Shackle S.4869		2	2	2	4	4	4
2	Stretcher M8x100 oc. S.11074		1	1	1	2	2	2
3	Rope thimble A6 oc	PN-66/M-80247	1	1	1	2	2	2
4	Bail clip 6.5 oc	PN-73/M-80241	4	4	4	8	8	8
5	Steel rope $\varnothing 5.5$ T6x37+Ao l=1680		1	1	1	2	2	2
6	Nut M8-5-B Fe/Zn5	PN-86/M-82144	1	1	1	2	2	2
7	Nut M5-5-B Fe/Zn5	PN-86/M-82144	8	8	8	16	16	16
8	Heat-shrinkable pipe PBF 12/6 l=30	PN-89/C-89209	2	2	2	4	4	4

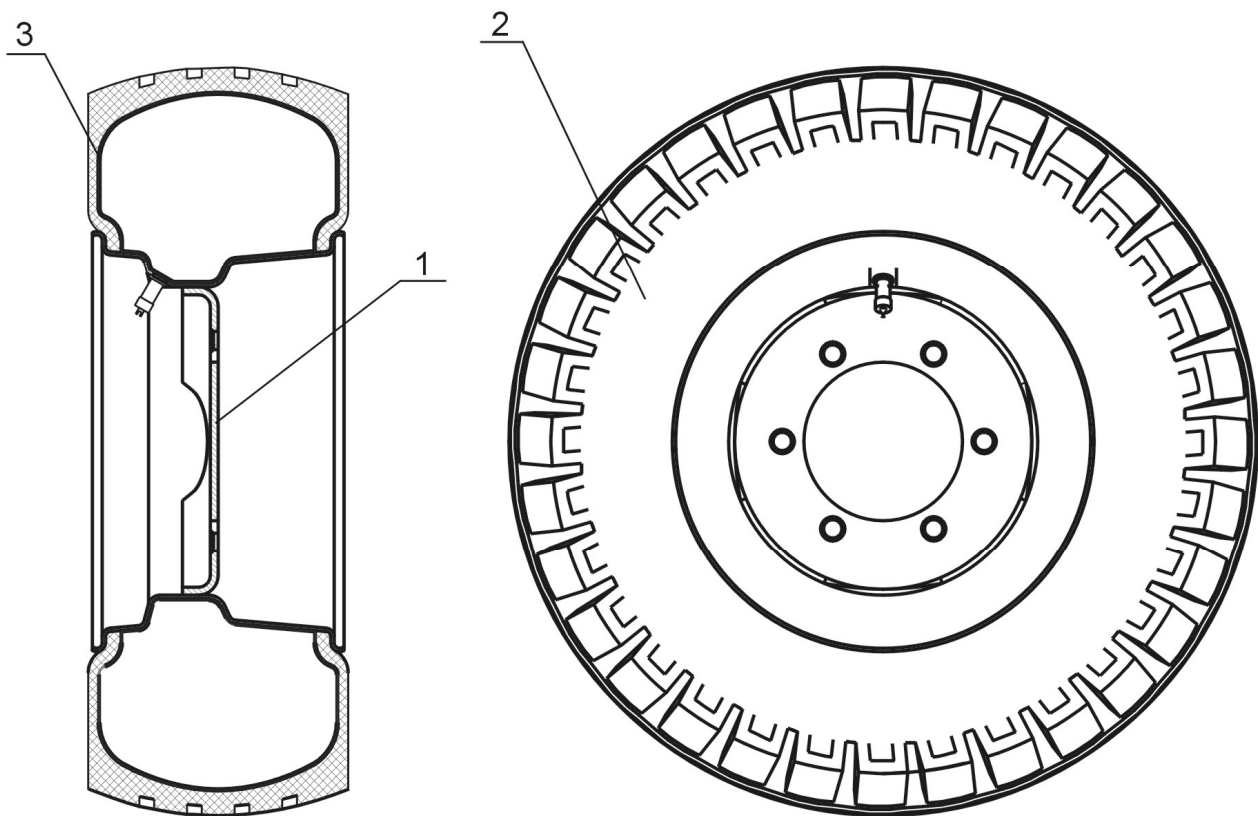


Fig. 38 Wheel, set

No.	Description (Drawing No.: 38)	No. of drawing/standard	Qty					
			T654	T654/DK	T654/A	T654/1	T654/1/DK	T654/1A
	Wheel, set	37RPN-00.06.000	2	2	2	-	-	-
	Wheel, set	37RPN-00.07.000	-	-	-	2	-	-
	Wheel, set	37RPN-00.08.000	-	-	-	-	2	2
1	Rim 9.00x15.3"	153.09.27	2	2	2	-	-	-
	Rim 9.00x15.3"	153.09.28	-	-	-	2	-	-
	Rim 9.00x15.3"	16.11.01	-	-	-	-	2	2
2	Tyre 10.0/75-15.3 14PR 134A8		2	2	2	-	-	-
	Tyre 11.5/80-15.3 14PR 143A8		-	-	-	2	-	-
	Tyre 14.0/65-16 14PR A6		-	-	-	-	2	2
3	Inner tube 10.0/75-15.3 with TR15 valve		2	2	2	-	-	-
	Inner tube 11.5/80+12.5/80-15.3 with TR15 valve		-	-	-	2	-	-
	Inner tube 14.0/65-16+400/60-15.5 with TR15 valve		-	-	-	-	2	2